

Grid-Tied PV Inverter

MS Series (7-10kW) G4

User Manual

V1.3-2025-11-05

Copyright Statement:

Copyright©GoodWe Technologies Co., Ltd. 2025. All rights reserved.

No part of this manual can be reproduced or transmitted to the public platform in any form or by any means without the prior written authorization of GoodWe Technologies Co., Ltd.

Trademarks

GOODWE and other GOODWE trademarks are trademarks of GoodWe Technologies

Co.,Ltd. All other trademarks or registered trademarks mentioned in this manual are owned by GoodWe Technologies Co.,Ltd.

NOTICE

The information in this user manual is subject to change due to product updates or other reasons. This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.

CONTENT

1 About This Manual	5
1.1 Applicable Model	5
1.2 Target Audience	5
1.3 Symbol Definition	5
2 Safety Precaution	7
2.1 General Safety	7
2.2 DC Side	7
2.3 AC Side	8
2.4 Inverter Installation	8
2.5 EU Declaration of Conformity	9
2.5.1 The inverter with wireless communication	9
2.5.2 The inverter without wireless communication	9
2.6 Personnel Requirements	9
3 Product Introduction	10
3.1 Introduction	10
3.2 Circuit Diagram	11
3.3 Supported Grid Types	12
3.4 Features	12
3.5 Appearance	13
3.5.1 Parts	13
3.5.2 Dimensions	14
3.5.3 Indicator Description	14
3.5.4 Nameplate	15
4 Check and Storage	17
4.1 Check Before Receiving	17
4.2 Deliverables	17
4.3 Storage	19
5 Installation	20
5.1 Installation Requirements	20
5.2 Inverter Installation	22
5.2.1 Moving the Inverter	22

5.2.2 Installing the Inverter	23
6 Electrical Connection	24
6.1 Safety Precautions	24
6.2 Connecting the PE cable	24
6.3 Connecting the AC Output Cable	25
6.4 Connecting the DC Input Cable(PV)	27
6.5 Communication	29
6.5.1 Communication Network Introduction	29
6.5.2 Connecting the Communication Cable	32
7 Equipment Commissioning	35
7.1 Check Before Power ON	35
7.2 Power On	35
8 System Commissioning	36
8.1 Setting Inverter Parameters via App	36
8.2 Setting Inverter Parameters via LCD	36
8.2.1 LCD Menu Introduction	37
8.3 Setting Inverter Parameters via SolarGo App	38
9 Maintenance	40
9.1 Power Off the Inverter	40
9.2 Removing the Inverter	40
9.3 Disposing of the Inverter	40
9.4 Troubleshooting	40
9.5 Routine Maintenance	49
9.6 Inverter Software Version Upgrade	49
10 Technical Parameters	50
11 Explanation of Terms	57
12 Obtaining of Relevant Product Manuals	58

1 About This Manual

This manual describes the product information, installation, electrical connection, commissioning, troubleshooting, and maintenance. Read through this manual before installing and operating the product. All the installers and users have to be familiar with the product features, functions, and safety precautions. This manual is subject to update without notice. For more product details and latest documents, visit <https://en.goodwe.com/>.

1.1 Applicable Model

This manual applies to the listed inverters below:

Model	Nominal Output Power	Nominal Output Voltage
GW7K-MS-CN-G40	7kW	220V, L/N/PE
GW8K-MS-CN-G40	8kW	
GW10K-MS-CN-G40	10kW	
GW7.5K-MS-G40	7.5kW	220V/230V/240V, L/N/PE
GW8.5K-MS-G40	8.5kW	
GW9.999K-MS-G40	9.999kW	
GW10K-MS-G40	10kW	
GW7.5K-MS-G41	7.5kW	220V/230V, L/N/PE
GW8K-MS -G40	8kW	

1.2 Target Audience

This manual applies to trained and knowledgeable technical professionals. The technical personnel has to be familiar with the product, local standards, and electric systems.

1.3 Symbol Definition

Different levels of warning messages in this manual are defined as follows:



DANGER

Indicates a high-level hazard that, if not avoided, will result in death or serious injury.



WARNING

Indicates a medium-level hazard that, if not avoided, could result in death or serious injury.



CAUTION

Indicates a low-level hazard that, if not avoided, could result in minor or moderate injury.

NOTICE

Highlight and supplement the texts. Or some skills and methods to solve product-related problems to save time.

2 Safety Precaution



WARNING

The inverters are designed and tested strictly complying with related safety rules. Read and follow all the safety instructions and cautions before any operations. Improper operation might cause personal injury or property damage as the inverters are electrical equipment.

2.1 General Safety

Notice

- The information in this user manual is subject to change due to product updates or other reasons. This guide cannot replace the product labels otherwise specified. All descriptions here are for guidance only.
- Before installations, read through the user manual. For additional information, please see the user manual.
- All installations should be performed by trained and knowledgeable technicians who are familiar with local standards and safety regulations.
- Use insulating tools and wear personal protective equipment when operating the equipment to ensure personal safety. Wear anti-static gloves, clothes, and wrist strap when touching electronic PV modules to protect the inverter from damage.
- Unauthorized disassembly or refit may cause damage to the device, and such damage is not covered by the warranty.
- Strictly follow the installation, operation, and configuration instructions in this manual. The manufacturer shall not be liable for equipment damage or personal injury if you do not follow the instructions. For more warranty details, please visit <https://www.goodwe.com/warrantyrelated.html>

2.2 DC Side



WARNING

- Ensure the PV module frames and the bracket system are securely grounded.
- Ensure the DC cables are connected tightly, securely and correctly. Inappropriate wiring may cause poor contacts or high impedances, and damage the inverter.
- Measure the DC cable using the multimeter to avoid reverse polarity connection. Also, the voltage should be under the max DC input voltage. The manufacturer shall not be liable for the damage caused by reverse connection and extremely high voltage.
- Do not connect the same PV string to multiple inverters. Otherwise, the inverters may be damaged.
- The PV modules used with the inverter must have an IEC61730 class A rating.

2.3 AC Side



WARNING

- The voltage and frequency at the connection point meet the inverter grid connection requirements
- Additional protective devices like circuit breakers or fuses are recommended on the AC side. Specification of the protective device should be at least 1.25 times the maximum output current.
- Make sure that all the groundings are tightly connected.
- You are recommended to use copper cables as AC output cables. If you prefer aluminum cables, remember to use copper to aluminum adapter terminals.




2.4 Inverter Installation



DANGER

- Do not apply mechanical load to the terminals, otherwise the terminals can be damaged.
- All labels and warning marks should be visible after the installation. Do not scrawl, damage, or cover any label on the device.
- Connect the inverter cables using the delivered PV connectors. The manufacturer shall not be liable for the equipment damage if connectors of other models are used.
- Warning labels on the inverter are as follows.

No.	Symbol	Definition
1		DANGER High voltage hazard. Disconnect all incoming power and turn off the product before working on it.
2		Delayed discharge. Wait 5 minutes after power off until the PV modules are completely discharged.
3		Read through the user manual before working on this device.
4		Potential risks exist. Wear proper PPE before any operations.
5		High-temperature hazard. Do not touch the product under operation to avoid being burnt.
6		Grounding point.

7		CE Mark.
8		Do not dispose of the inverter as household waste. Discard the product in compliance with local laws and regulations, or send it back to the manufacturer.
9		RCM Mark.

2.5 EU Declaration of Conformity

2.5.1 The inverter with wireless communication

GoodWe Technologies Co., Ltd. hereby declares that the inverter with wireless smart dongles sold in the European market meets the requirements of the following directives:

- Radio Equipment Directive 2014/53/EU (RED)
- Restrictions of Hazardous Substances Directive 2011/65/EU and (EU) 2015/863 (RoHS)
- Waste Electrical and Electronic Equipment 2012/19/EU
- Registration, Evaluation, Authorization and Restriction of Chemicals (EC) No 1907/2006 (REACH)

2.5.2 The inverter without wireless communication

GoodWe Technologies Co., Ltd. hereby declares that the inverter without wireless smart dongles sold in the European market meets the requirements of the following directives:

- Electromagnetic compatibility Directive 2014/30/EU (EMC)
- Electrical Apparatus Low Voltage Directive 2014/35/EU (LVD)
- Restrictions of Hazardous Substances Directive 2011/65/EU and (EU) 2015/863 (RoHS)
- Waste Electrical and Electronic Equipment 2012/19/EU
- Registration, Evaluation, Authorization and Restriction of Chemicals (EC) No 1907/2006 (REACH)

You can download the EU Declaration of Conformity from our official website at: <https://en.goodwe.com>.


2.6 Personnel Requirements

NOTICE
<ul style="list-style-type: none"> ● Personnel who install or maintain the equipment must be strictly trained, learn about safety precautions and correct operations. ● Only qualified professionals or trained personnel are allowed to install, operate, maintain, and replace the equipment or parts.

3 Product Introduction

3.1 Introduction

The MS inverter is a single-phase PV string grid-tied inverter. The inverter converts the DC power generated by the PV module into AC power and feeds it into the utility grid. The intended use of the inverter is as follows:

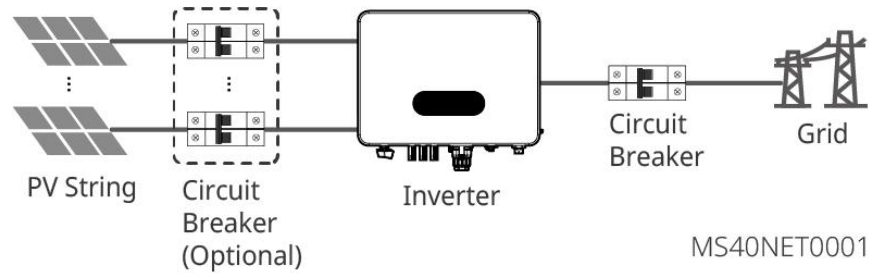

Model Description

GW10K-MS-CN-G40

1 2 3 4 5

MS40DSC0002

No.	Definition	Explanation
1	Brand code	GW: GoodWe
2	Nominal Power	10K: the nominal power is 10kW 8K: the nominal power is 8kW 7K: the nominal power is 7kW
3	Series code	MS: MS Series
4	Special Country Code	CN: Chinese Edition
5	Version code	G40: The inverter version is 4.0

GW10K-MS-G40

1 2 3 4


MS40DSC0007

No.	Definition	Explanation
-----	------------	-------------


1	Brand code	GW: GoodWe
2	Nominal Power	10K: the nominal power is 10kW 9.999K: the nominal power is 9.999kW 8.5K: the nominal power is 8.5kW 8K: the nominal power is 8kW 7.5K: the nominal power is 7.5kW
3	Series code	MS: MS Series
4	Version code	G40/ G41: The inverter version is 4.0 or 4.1

3.2 Circuit Diagram


GW7.5K-MS-G40, GW8.5K-MS-G40, GW10K-MS-G40, GW9.999K-MS-G40:

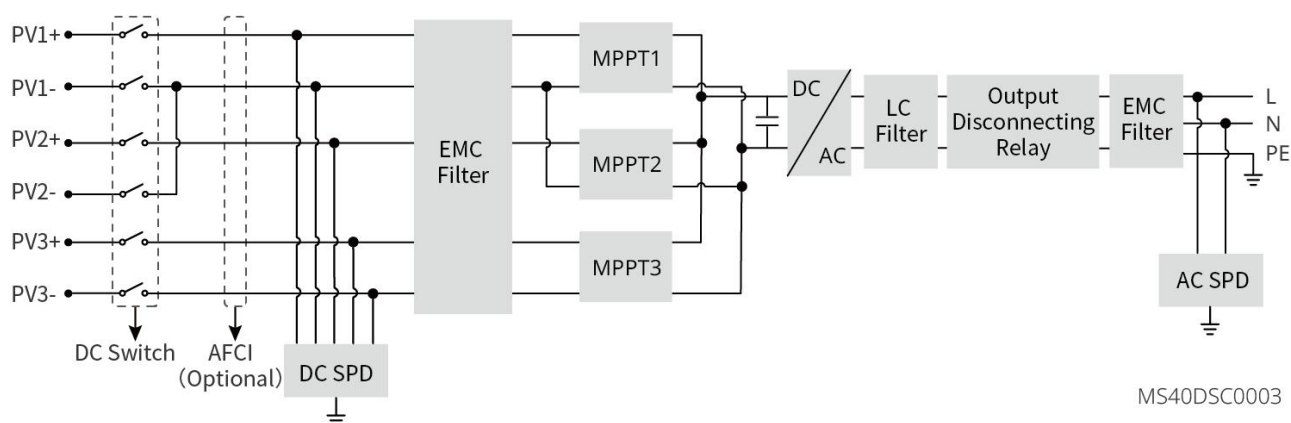

GW7.5K-MS-G41, GW8K-MS-G40, GW7K-MS-CN-G40, GW8K-MS-CN-G40, GW10K-MS-CN-G40:

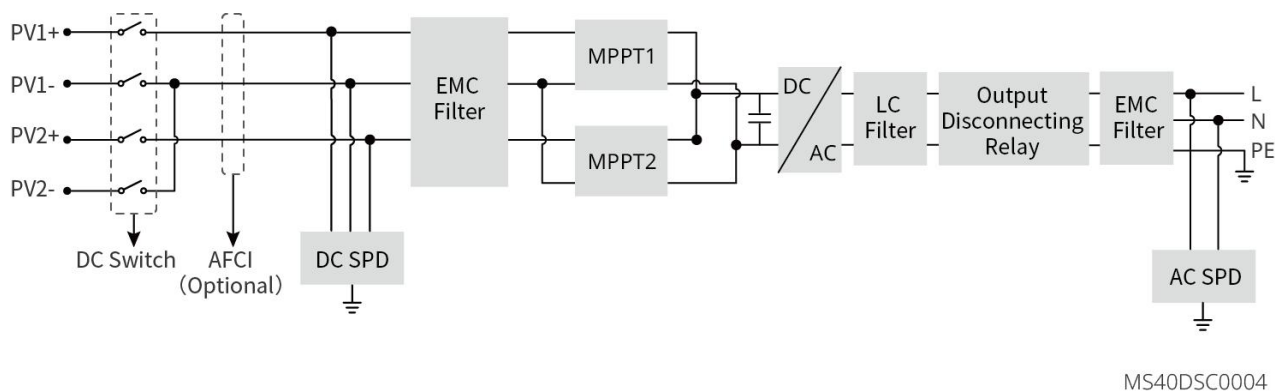

3.3 Supported Grid Types

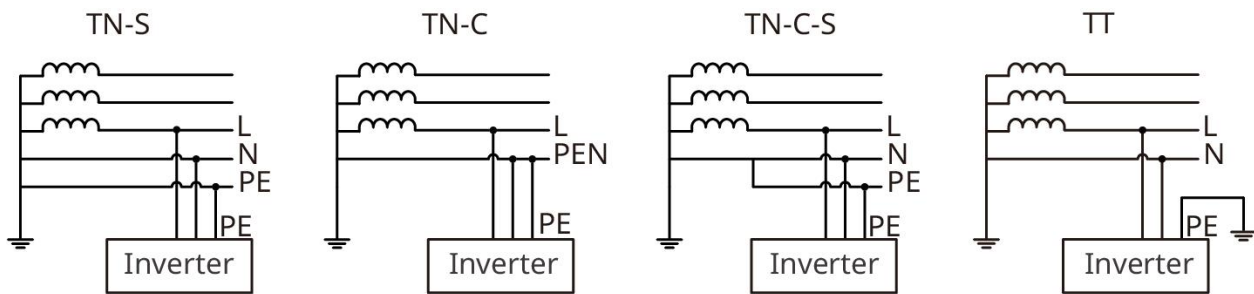

MS40NET0003

3.4 Features

NOTICE

The specific functional configuration shall be subject to the actual model.

AFCI(Arc Fault Circuit Interrupter)

The AFCI function is used to detect the arc faults on the DC side of the inverter. When an arc fault occurs, the inverter will automatically provide protection.


Reasons for the occurrence of electric arcs:

- Damaged or improperly connected DC connectors in the PV system.
- Wrong connected or broken cables.
- Aging connectors and cables.

Communications

The inverter supports parameter setting via Bluetooth in the near proximity. It also supports connecting to the monitoring platform via WiFi or LAN or 4G, so as to monitor the operation status of the inverter, the operation conditions of the power station, etc.


- Bluetooth: meets Bluetooth 5.1 standard.
- WiFi/LAN2.0 (Optional): Wireless IEEE 802.11 b/g/n @2.4 GHz; Ethernet with 10M/100Mbps adaptive speed. If a third-party monitoring platform is to be used, this platform must support the ModbusTCP communication protocol.
- 4G (Optional): It supports connection to a third-party monitoring platform via the MQTT communication protocol.

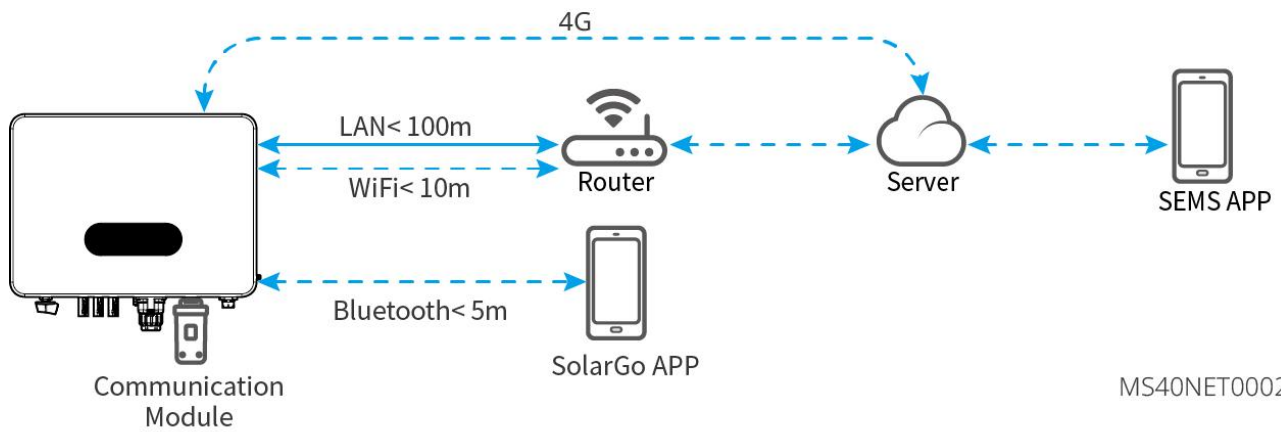

3.5 Appearance

There may be differences in the appearance and color of the product, and it refer to the actual situation.


3.5.1 Parts

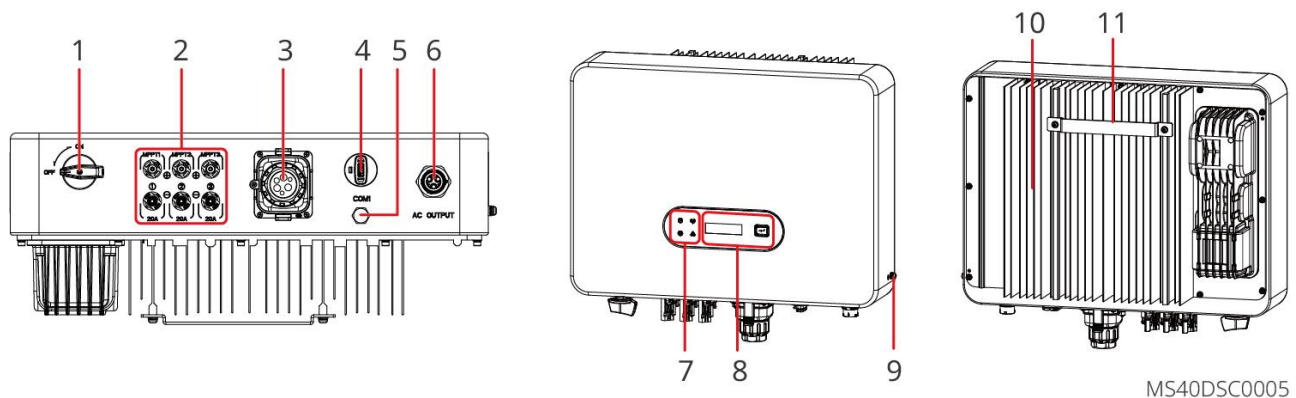





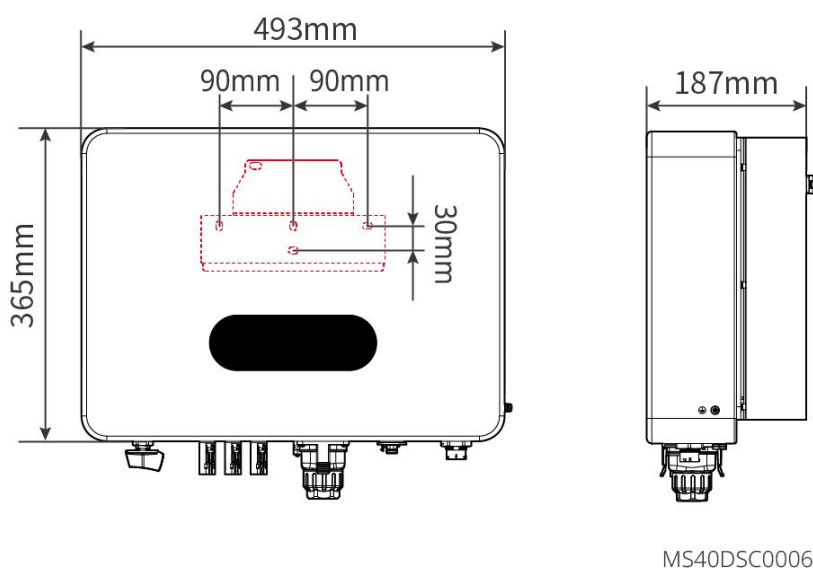

No.	PV modules / Silk Screen Printing	Explanation
1	DC Switch	Start or stop DC input.
2	PV Input Terminal	Used to connect the PV module DC input cables. <ul style="list-style-type: none"> GW7.5K-MS-G40、GW8.5K-MS-G40、GW10K-MS-G40、GW9.999K-MS-G40: PV+/PV- x 3。 GW7.5K-GW8K-MS-G40-MS-G40、GW8K-MS-CN-G40、GW10K-MS-CN-G40-MS-G40: PV+/PV- x 2。
3	Communication Terminal	To connect communication lines such as load control, CT (optional), RS485 (electric meter), remote shutdown, DRED (Australia) / RCR (Europe).
4	Smart Dongle Terminal	<ul style="list-style-type: none"> To connect the smart dongle such as 4G、WiFi/LAN,etc. The dongle type may differ depending on actual needs. To connect USB flash drive for local software upgrading. To connect the USB-RS485 cable in Brazil.
5	Ventilation Valve	-













6	AC output line connection terminals	To connect the AC output cable, which links the inverter with the utility grid.
7	Indicator	Indicates working state of the inverter.
8	LCD and Button	<ul style="list-style-type: none"> Used to check the parameters of the inverter. <ul style="list-style-type: none"> GW7K-MS-CN-G40、GW8K-MS-CN-G40、GW10K-MS-CN-G40, optional. GW7.5K-MS-G40、GW8.5K-MS-G40、GW9.999K-MS-G40、GW10K-MS-G40、GW7.5K-MS-G41、GW8K-MS-G40, standard. Used to select menus displayed on the screen.
9	Protective grounding terminal	To connect the PE cable
10	Heat sink	Used to cool the inverter.
11	Mounting Plate	Used to install the inverter.

3.5.2 Dimensions




3.5.3 Indicator Description

Indicator	Status	Description
 Power		STEADY ON = EQUIPMENT POWER ON
		OFF = EQUIPMENT POWER OFF
 Operating		STEADY ON = THE INVERTER IS FEEDING POWER
		OFF = THE INVERTER IS NOT FEEDING POWER

		SINGLE SLOW BLINKING = SELF CHECK BEFORE CONNECTING TO THE GRID
		SINGLE FAST BLINKING = CONNECTING TO THE GRID
 Communications		STEADY ON= WIRELESS IS CONNECTED/ACTIVE
		SINGLE FAST BLINKING= WIRELESS SYSTEM IS RESETTNG
		BLINK 2 = WIRELESS IS NOT CONNECTED TO ROUTER OR BASE STATION
		BLINK 4 = NOT CONNECTED TO SERVER
		SINGLE SLOW BLINKING = RS485 IS CONNECTED
		OFF = WIRELESS IS RESTORING FACTORY DEFAULT SETTING
 Faulty		STEADY ON = A FAULT HAS OCCURRED
		OFF = NO FAULT

3.5.4 Nameplate

The nameplate is for reference only.

GOODWE	
Product: Grid-Tied PV Inverter	
Model : *****_***_**	
PV Input	UDCmax: **** Vd.c.
	UMPP: **...*** Vd.c.
	IDC,max: ** Ad.c.
	ISC PV: ** Ad.c.
Output	UAC,r: *** Va.c.
	fAC, r: ** Hz
	PAC,r: ** kW
	IAC,max: ** Aa.c.
	Sr: ** kVA
	Smax: ** kVA
P.F.: ~*, **cap...**ind Toperating: ~*~* °C Non-isolated, IP**, protective Class I, OVC DCII/ACIII	
	
S/N:	
***** Co., Ltd. E-mail: *****@****.com *****	
S/N	

GW trademark, product type, and product model

Technical parameters

Safety symbols and certification marks

Contact information and serial number

4 Check and Storage

4.1 Check Before Receiving

Check the following items before receiving the product.

1. Check the outer packing box for damage, such as holes, cracks, deformation, and other signs of equipment damage. Do not unpack the package and contact the supplier as soon as possible if any damage is found.
2. Check the inverter model. If the inverter model is not what you requested, do not unpack the product and contact the supplier.
3. Check the deliverables for correct model, complete contents, and intact appearance. Contact the supplier as soon as possible if any damage is found.

4.2 Deliverables








 





 

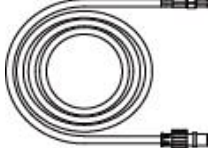
WARNING



Connect the DC cables with the delivered terminals. The manufacturer shall not be liable for the damage if other terminals are used.

NOTICE

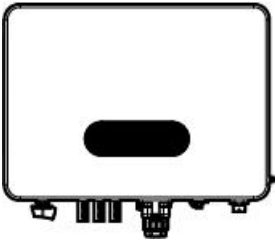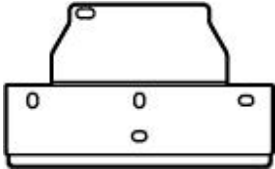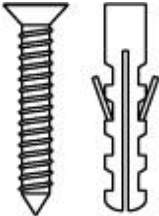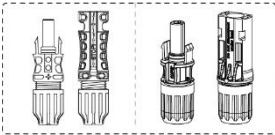- [1]. The number of DC connectors is the same as the number of DC terminals of the inverter. You may confirm it according to the number of DC terminals of the inverter.
- [2]. Smart dongle types: WiFi/LAN, 4G, etc. The actual delivered type depends on the selected inverter communication method.
- [3]. The number of communication terminals and PIN terminals shall match the selected communication mode. You may confirm it according to the communication configuration. The configuration of the inverter is different, and the number of 2 PIN terminals and DRED/RCR communication terminals varies for difference communication configuration. You may refer to the actual situation.
- [4]. The protocol converter connection cable is only available for shipping within China.
- [5]. CT is standard in Australia and optional in other regions.
- [6]. China region x 0; other regions x 1

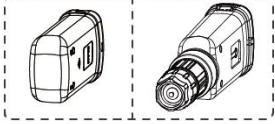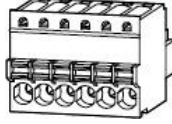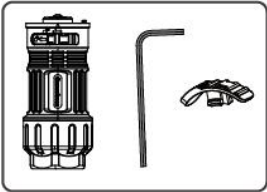Part	Quantity	Part	Quantity
------	----------	------	----------

	Inverter x 1		Mounting plate x 1
	Expansion bolts x 4		PV Terminal ^[1] GW7.5K-MS-G40、 GW8.5K-MS-G40、 GW10K-MS-G40、 GW9.999K-MS-G40: x 3 GW7.5K-GW8K-MS-G40-MS- G40、GW8K-MS-CN-G40、 GW10K-MS-CN-G40-MS-G40: x 2
	Grounding OT terminal x 1		2 PIN communication terminal x N ^[3]
	6PIN RS485 communication terminal x 1		PIN Terminal x N ^[3]
	COM dongle x1 ^[2]		2 PIN communication terminal x N ^[3]
	<ul style="list-style-type: none"> ● AC Connector x 1 ● Hex screwdriver x 1 ● AC terminal unlocking tool x1 		(Optional) CT x 1 ^[5]
	Protocol converter connection cable (inverter side) x 1 ^[4]		Protocol converter connection cable (protocol converter side) x 1 ^[4]

	Documents x 1		PV unlocking tool x N ^[6]
---	---------------	---	--------------------------------------

4.3 Storage

If the equipment is not to be installed or used immediately, please ensure that the storage environment meets the following requirements:

1. Do not unpack the outer package or throw the desiccant away.
2. Store the equipment in a clean place. Make sure the temperature and humidity are appropriate and no condensation.
3. The height and direction of the stacking inverters should follow the instructions on the packing box.
4. The inverters must be stacked with caution to prevent them from falling.
5. If the inverter has been stored for more than two years or has not been in operation for more than six months after installation, it is recommended to be inspected and tested by professionals before being put into use.
6. To ensure good electrical performance of the internal electronic PV modules of the inverter, it is recommended to power it on every 6 months during storage. If it has not been powered on for more than 6 months, it is recommended to to be inspected and tested by professionals before being put into use.

5 Installation

5.1 Installation Requirements

Installation Environment Requirements


1. Do not install the equipment in a place near flammable, explosive, or corrosive materials.
2. Install the equipment on a surface that is solid enough to bear the inverter weight.
3. Install the equipment in a well-ventilated place to ensure good dissipation. Also, the installation space should be large enough for operations.
4. The equipment with a high ingress protection rating can be installed indoors or outdoors. The temperature and humidity at the installation site should be within the appropriate range.
5. Install the equipment in a sheltered place to avoid direct sunlight, rain, and snow. Build a sunshade if it is needed.
6. Do not install the equipment in a place that is easy to touch, especially within children's reach. High temperature exists when the equipment is working. Do not touch the surface to avoid burning.
7. Install the equipment at a height that is convenient for operation and maintenance, electrical connections, and checking indicators and labels.
8. The altitude to install the inverter shall be lower than the maximum working altitude 4000m.
9. The inverter is easy to be corroded when installed in salt areas. A salt area refers to the region within 1000 meters offshore or affected by the sea breeze. The area prone to the sea breeze varies depending on weather conditions (e.g. typhoon, monsoon) or terrain (such as dams and hills).
10. Install the product away from electromagnetic interference. If there are radio stations or wireless communication equipment below 30 MHz near the installation location, please install the equipment as follows:
 - Add a multi-turn winding ferrite core at the DC input line or AC output line of the inverter, or add a low-pass EMI filter.
 - The distance between the inverter and the wireless EMI equipment is more than 30m.

Mounting Support Requirements

- The mounting support shall be nonflammable and fireproof.
- Make sure that the support surface is solid enough to bear the product weight load.
- Do not install the product on the support with poor sound insulation to avoid the noise generated by the working product, which may annoy the residents nearby.

Installation Angle Requirements


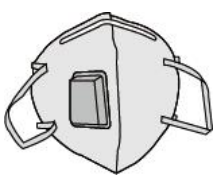



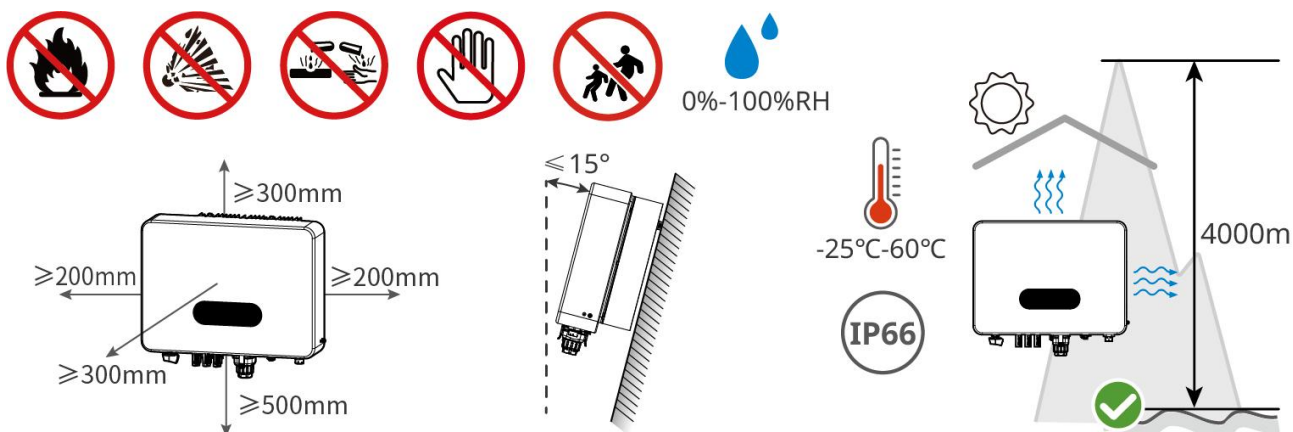



 
- Install the inverter vertically or at a maximum back tilt of 15 degrees.
- Do not install the inverter upside down, forward tilt, back forward tilt, or horizontally.




 




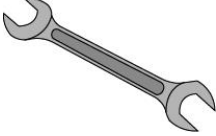
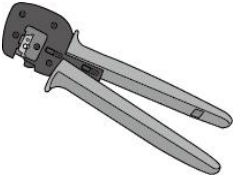


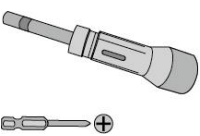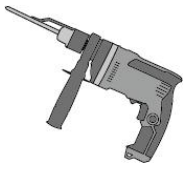MS40INT0003

Installation Tool Requirements

The following tools are recommended when installing the equipment. Use other auxiliary tools on site if necessary.

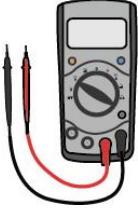Tool Types	Explanation	Tool Types	Explanation
	Insulating gloves, Protective gloves		Dust mask
	Goggles		Safety shoes
	Torque wrench M3/M5		Hammer drill
	Diagonal pliers		Heat gun
	Wire stripper		Terminal crimping tool

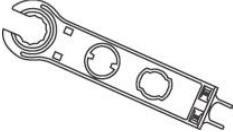	Rubber hammer		Marker
	Multimeter		Heat shrink tube
	Vacuum cleaner		Level
 or 	DC unlocking tool		Wrench
	Crimping tool	-	-

5.2 Inverter Installation

5.2.1 Moving the Inverter



CAUTION

- Operations such as transportation, turnover, installation and so on must meet the requirements of the laws and regulations of the country or region where inverters are installed.
- Move the inverter to the site before installation. Follow the instructions below to avoid personal injury or equipment damage.
 1. Consider the weight of the equipment before moving it. Assign enough personnel to move the equipment to avoid personal injury.
 2. Wear safety gloves to avoid personal injury.
 3. Keep balance to avoid falling down when moving the equipment.

5.2.2 Installing the Inverter

NOTICE

- Avoid the water pipes and cables buried in the wall when drilling holes.
- Wear goggles and a dust mask to prevent the dust from being inhaled or contacting eyes when drilling holes.
- DC switch locks are to be provided by users (Australia only).
- The anti-theft lock of appropriate size should be prepared by customers. Otherwise it is unable to finish the installation.
- Make sure the inverter is firmly installed in case of falling down.


Step 1 Put the mounting plate on the wall horizontally and mark positions for drilling holes.

Step 2 Drill holes to a depth of 45mm using the hammer drill. The diameter of the drill bit should be 8mm.

Step 3 Secure the mounting plate using the expansion bolts.

Step 4 Install the inverter on the mounting plate. Tighten the nuts to secure the mounting plate and the inverter.

Step 5 Install the anti-theft lock with a hole diameter of 8mm. Install DC switch locks (Australia only) with a hole diameter of 5mm.

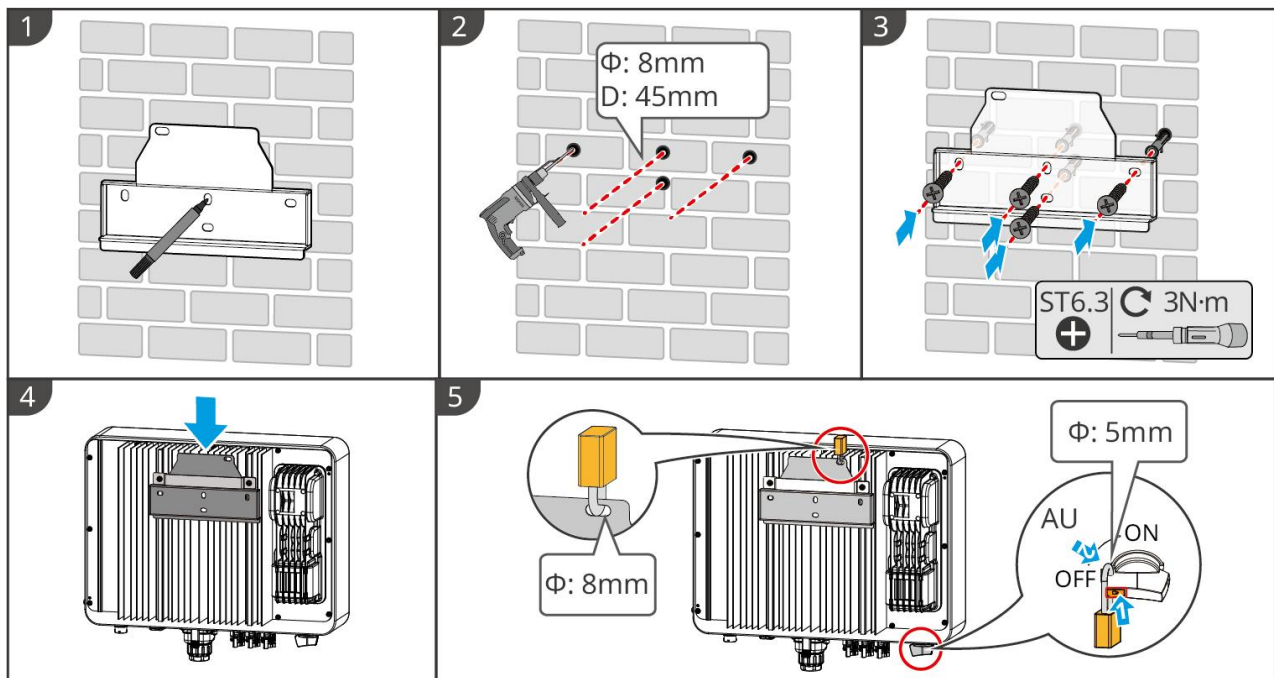

MS40INT0002

6 Electrical Connection

6.1 Safety Precautions



- Disconnect the DC switch and the AC output switch of the inverter to power off the inverter before any electrical connections. Do not work with power on. Otherwise, an electric shock may occur.
- Perform electrical connections in compliance with local laws and regulations, including operations, cables, and PV module specifications.
- If the cable bears too much tension, the connection may be poor. Reserve a certain length of the cable before connecting it to the inverter cable port.


NOTICE

- Wear personal protective equipment like safety shoes, protective gloves, and insulating gloves during electrical connections.
- All electrical connections should be performed by qualified professionals.
- Cable colors in this document are for reference only. The cable specifications shall meet local laws and regulations.

6.2 Connecting the PE cable



- The PE cable connected to the enclosure of the inverter cannot replace the PE cable connected to the AC output port. Make sure that both of the two PE cables are securely connected.
- Make sure that all the grounding points on the enclosures are equipotential connected when there are multiple inverters.
- To improve the corrosion resistance of the terminal, you are recommended to apply silica gel or paint on the ground terminal after installing the PE cable.
- The PE cable is prepared by the customer. Recommended specifications:
 - Type: single-core outdoor copper cable
 - Conductor cross-sectional area: 4-6mm²

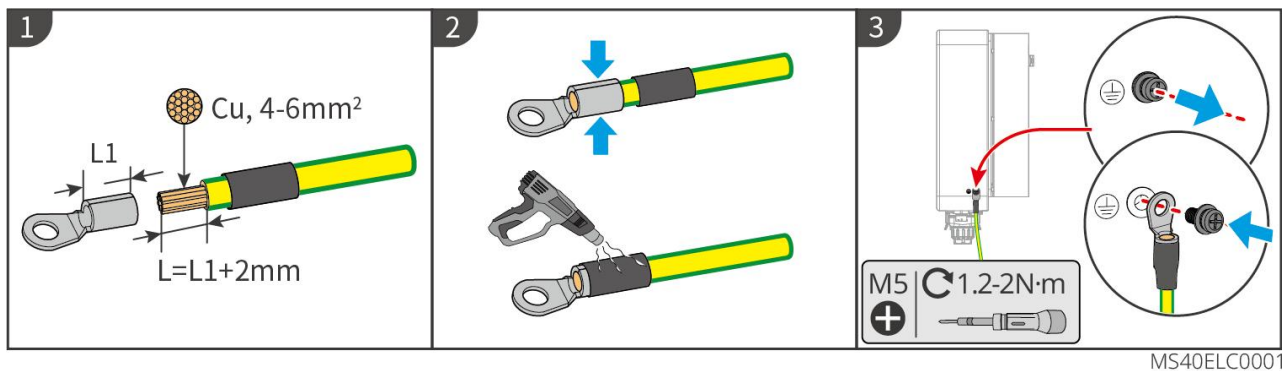

6.3 Connecting the AC Output Cable

! WARNING

- Do not connect loads between the inverter and the AC switch directly connected to the inverter.
- The Residual Current Monitoring Unit (RCMU) is integrated into the inverter. The inverter will disconnect the utility grid rapidly once it detects any leak current over the permissible range.

NOTICE

- Install one AC circuit breaker for each inverter. Multiple inverters cannot share one AC circuit breaker.
- Seal the AC output terminals with waterproof covers when they are not to be used. Otherwise, the ingress protection rating will be influenced.

An AC circuit breaker shall be installed on the AC side to make sure that the inverter can safely disconnect the grid when an exception happens. Select the appropriate AC circuit breaker in compliance with local laws and regulations. Recommended AC circuit breakers:

Inverter model	AC circuit breaker
GW7K-MS-CN-G40	50A
GW8K-MS-CN-G40	50A
GW10K-MS-CN-G40	63A
GW7.5K-MS-G40	50A
GW8.5K-MS-G40	63A
GW9.999K-MS-G40	63A
GW10K-MS-G40	63A
GW7.5K-MS-G41	50A
GW8K-MS -G40	50A

Please choose whether to install an RCD device in accordance with local laws and regulations.

When the DC component of the leakage current exceeds permissible limits, an A-type Residual

Current Device (RCD) must be installed to protect the equipment. It is recommended to select an RCD rated at 300mA (according to local regulations).

NOTICE

Install one AC circuit breaker for each inverter. Multiple inverters cannot share one AC circuit breaker.


WARNING

- Pay attention to the silkscreens L, N, PE on the AC terminal. Connect the AC cables to the corresponding terminals. The inverter may be damaged if the cables are connected inappropriately.
- Make sure that the whole cable cores are inserted into the AC terminal holes. No part of the cable core can be exposed.
- Make sure that the cables are connected securely. Otherwise, the terminal may be too hot to damage the inverter when the inverter is working.

Step 1 Make the AC output cable.


Step 2 Disassemble the AC connector. Insert the AC output cable into the AC connector. Composite AC Terminal.

Step 3 Plug the AC connector into the inverter.

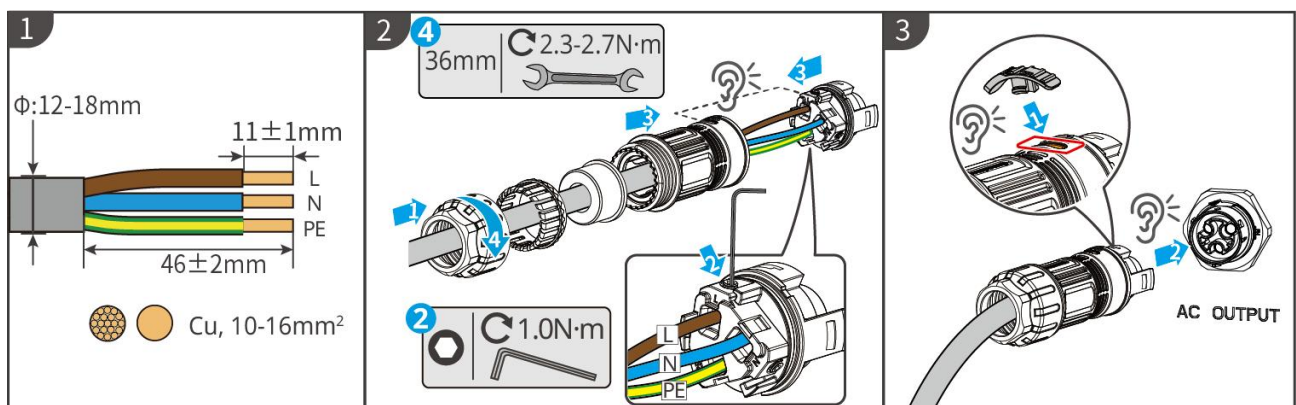


MS40ELC0004

Removing the AC Connector

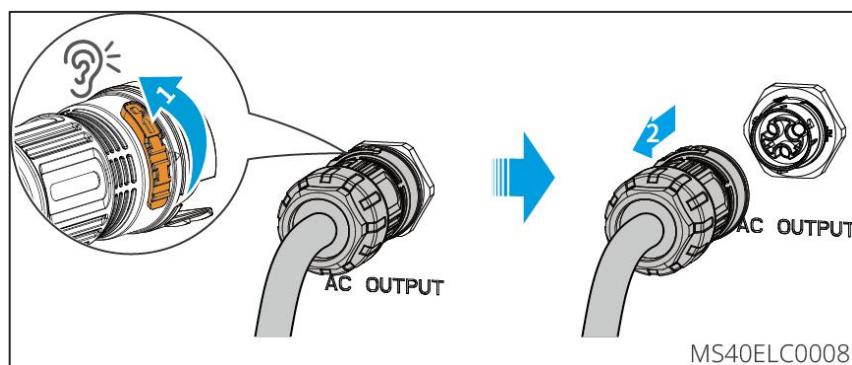

MS40ELC0008

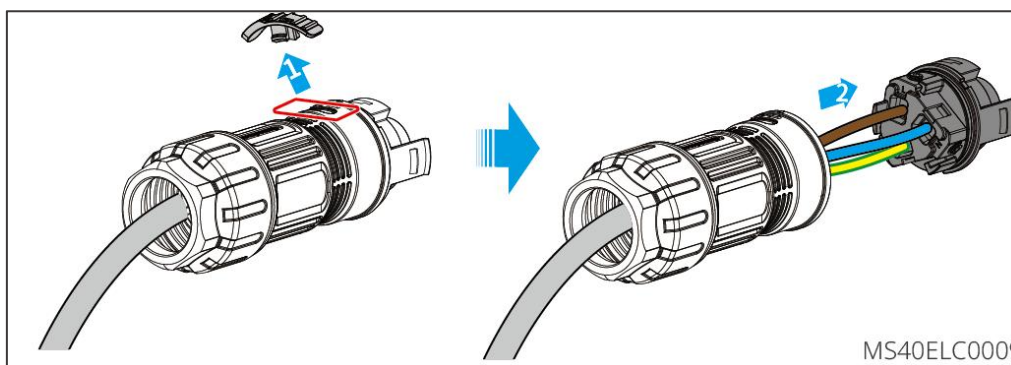

NOTICE

- Make sure that the cable is connected correctly and securely. Clear the debris after completing the connection.
- Seal the AC output terminal to ensure the ingress protection rating.

6.4 Connecting the DC Input Cable(PV)

! DANGER

Confirm the following information before connecting the PV string to the inverter. Otherwise, the inverter may be damaged permanently or even cause fire and cause personal and property losses.

1. Make sure that the max short circuit current and the max input voltage per MPPT are within the permissible range.
2. Make sure that the positive pole of the PV string connects to the PV+ of the inverter. And the negative pole of the PV string connects to the PV- of the inverter.

! WARNING

- Mixing PV modules of different brands or models in the same MPPT or connecting PV modules with different directions or inclination angles in the same PV string may not necessarily damage the inverter, but may lead to a decrease in the system performance.
- When the Max. Input Voltage of the inverter is 600V, please make sure that the open circuit voltage of the PV string connected to each MPPT shall not exceed 600V. When the input voltage ranges from 560 V to 600 V, the inverter will enter the standby state. When the input voltage returns to the MPPT operating voltage range of 40 V to 560 V, the inverter will resume normal operating st.
- It is recommended that the voltage difference between different MPPT circuits does not exceed 150V.
- It is recommended that the sum of the I_{mp} of the PV strings connected to each MPPT shall not

exceed the Max. Input Current per MPPT of the inverter.

- When there are multiple PV strings, it is recommended to maximize the connections of MPPTs of the inverter.
- The PV strings cannot be grounded. Ensure the minimum isolation resistance of the PV string to the ground meets the minimum isolation resistance requirements before connecting the PV string to the inverter.
- The DC input cable is prepared by the customer.

NOTICE

Seal the PV input terminals using waterproof covers when they are not to be used. Otherwise, the ingress protection rating will be influenced.

Connecting the DC Input Cable


Step 1 Prepare DC cables.


Step 2 Crimp the DC input terminals and assemble the DC connectors.

Step 3 Fasten the PV connector.

Step 4 Measure the DC input voltage.

Step 5 Connect the DC connectors to the DC terminals of the inverter.

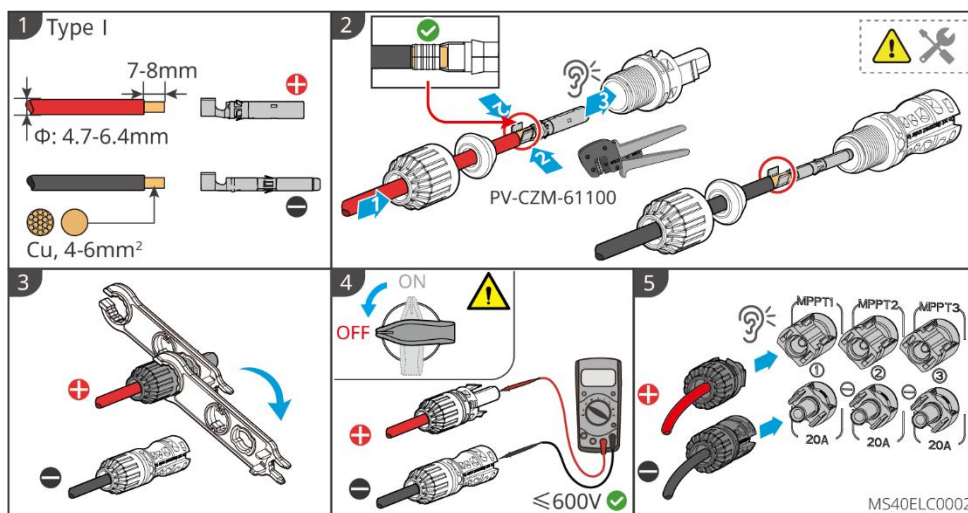

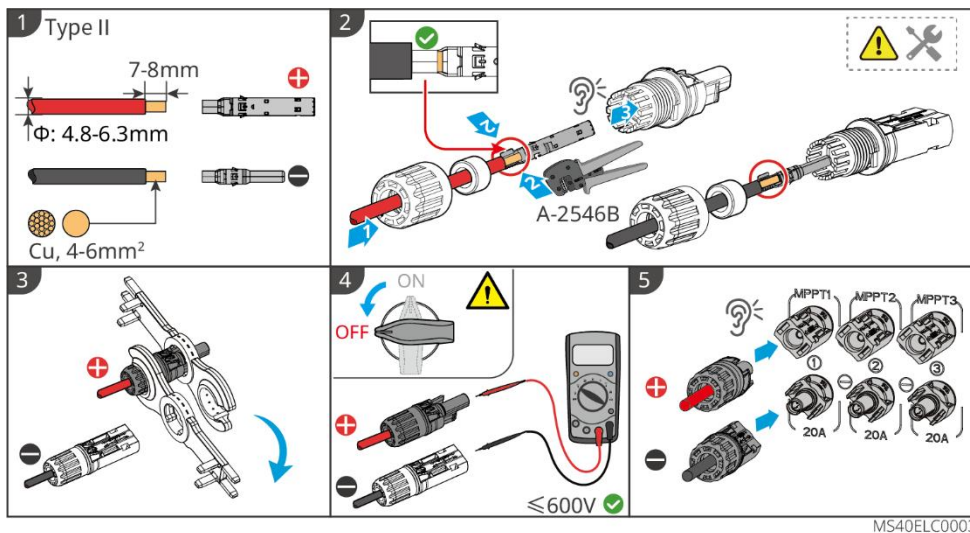

6.5 Communication

6.5.1 Communication Network Introduction

Export Power Limit Networking

NOTICE

- Connecting the inverter to a smart meter or CT (Current Transformer) enables the functions of output power limitation and load monitoring.
- Please enable the "Grid-connected Power Limitation" function through the SolarGo App.

The PV station generates power for self-consumption. When the load cannot consume all the generated power, the inverter can monitor the on-grid electric data in real-time and adjust the output power via a smart meter to avoid the surplus current feeding back to the utility grid.

! WARNING

- When the single inverter is installed for the first time, it's unnecessary to pay attention to the CT sampling current direction; when the CT is replaced or maintained at a later stage, please use **the meter/CT-assisted detection** function on the SolarGo App to make the inverter re-adapt to the CT sampling current direction.
- In the multi inverters scenario, CT installation position should be close to the grid connection point. The correct installation direction refers to that "-->" in CT is the direction of inverter current pointing to the grid. The inverter will be triggered with an alarm if CT is installed reversely. It is unable to realize the power limit function.
- The aperture of the CT should be larger than the outer diameter of the AC power line to ensure that the AC power line can pass through the CT.
- CT shall be snap fitted on Cable L. Do not fit it on Cable N.
- The CT (Current Transformer) shipped with the inverter has the following specifications: sampling range of 90A, transformation ratio of 1000:1, and cable length of 5m.


6. GM330:
 - Choose nA/5A for the current transformation ratio of the CT. (nA: For primary current of the CT, n ranges from 200 to 5000. Set the current value depending on the actual needs. 5A: The output current of the secondary current of the CT.)
 - The recommended precision of the CT: 0.5, 0.5s, 0.2, 0.2s. Ensure the sampling error for the CT current shall be $\leq 1\%$.
 - To ensure the current detection accuracy of the CT, it is recommended that the length of the CT cable should not exceed 30 m and the current-carrying capacity of the cable be 6A.
7. Please ensure that the meter wiring and phase sequence are correct. Recommended cross-sectional area of the smart meter input power cable: 1mm²(18AWG).
8. An Ezlink3000 need to be used to realize the export power limit of multiple inverter paralleling. If you need to use it, please contact the after-sales service or the dealer for purchase.
9. Plug a smart dongle into the inverter to establish a connection between the inverter and the smartphone or web pages through 4G, WiFi/LAN smart dongles to set relevant inverter parameters, check running information and fault information, and observe system status in time via the smartphone or web pages.
 - When there is only one inverter in the system, the 4G Kit-CN-G20, 4G Kit-CN-G21, WiFi/LAN Kit-20 or WiFi Kit-20 smart dongles can be used.
 - When multiple inverters are connected in a parallel system, the Ezlink3000 should be installed to the master inverter.

NOTICE

This type of meter is mainly used for export power control of the grid-connection point. The measured power generation and power consumption can only be used as a reference and cannot serve as the basis for electricity bill metering. The electricity bill metering should be based on the metering meter of the power grid company.


Single-Inverter Export Power Limit Network

Meter solution (GM1000/GMK110)

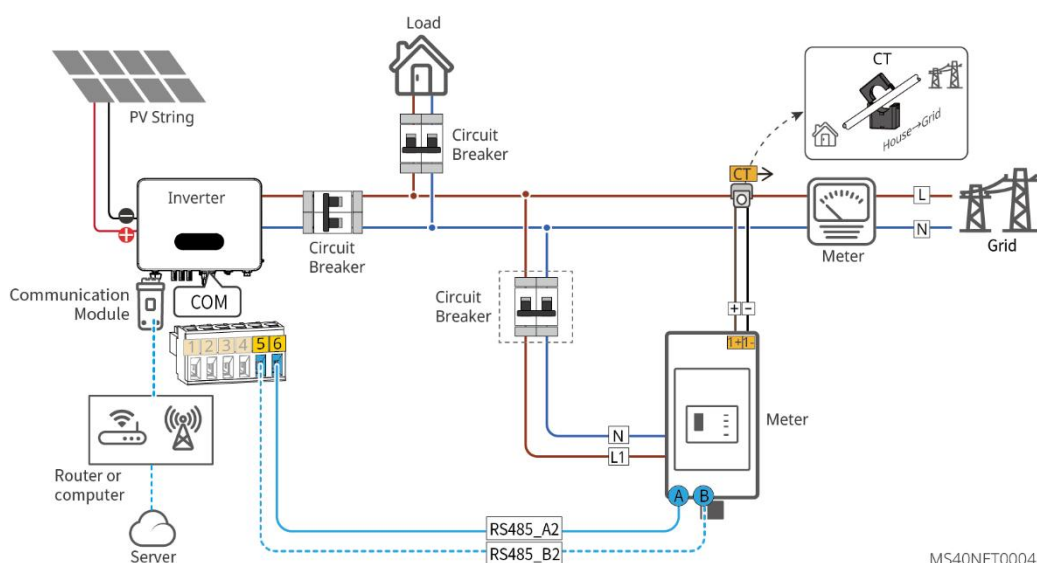

NOTICE


Shipped with inverter in Australia, optional in other regions.

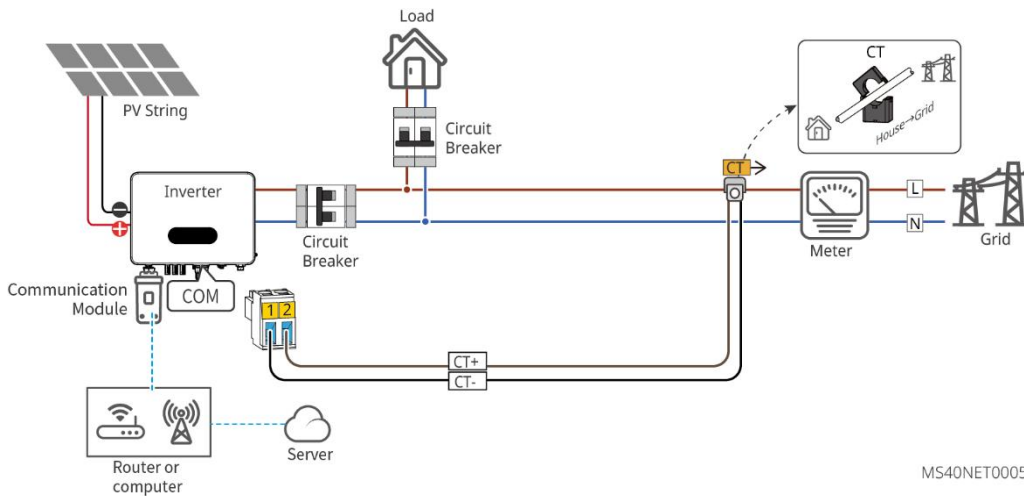

Multi-Inverter Export Power Limit Network (GM330 + Ezlink3000)

NOTICE


- After completing cable connections, set related parameters via LCD or SolarGo app to enable export power limit control or output power limit control.
- When operating in parallel, only the master inverter needs to be connected to the Ezlink3000; the slave inverters do not require a Smart Dongle. The Ezlink3000 version must be V1.6.8 or higher.

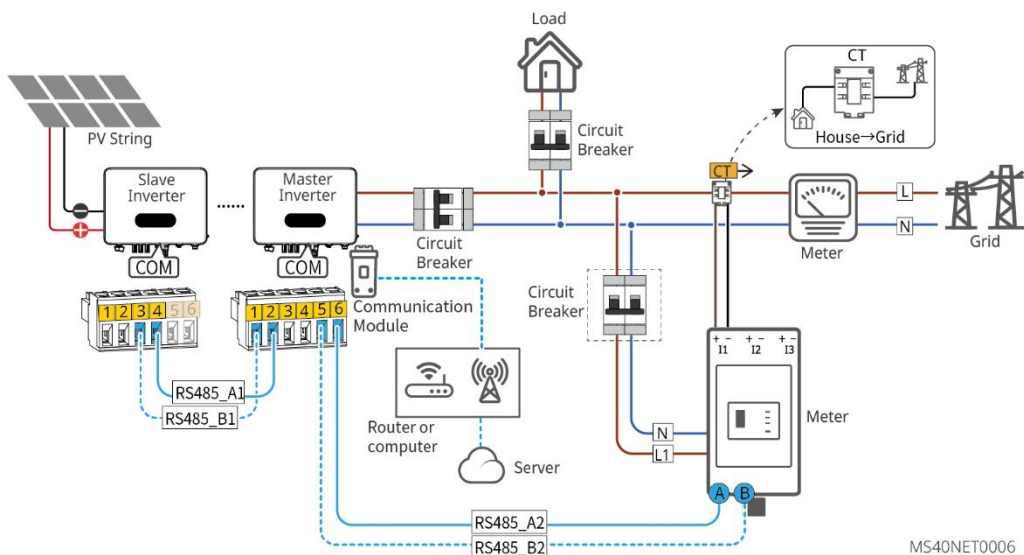

NOTICE

After completing cable connections, set related parameters via LCD or SolarGo app to enable export power limit control or output power limit control.

6.5.2 Connecting the Communication Cable

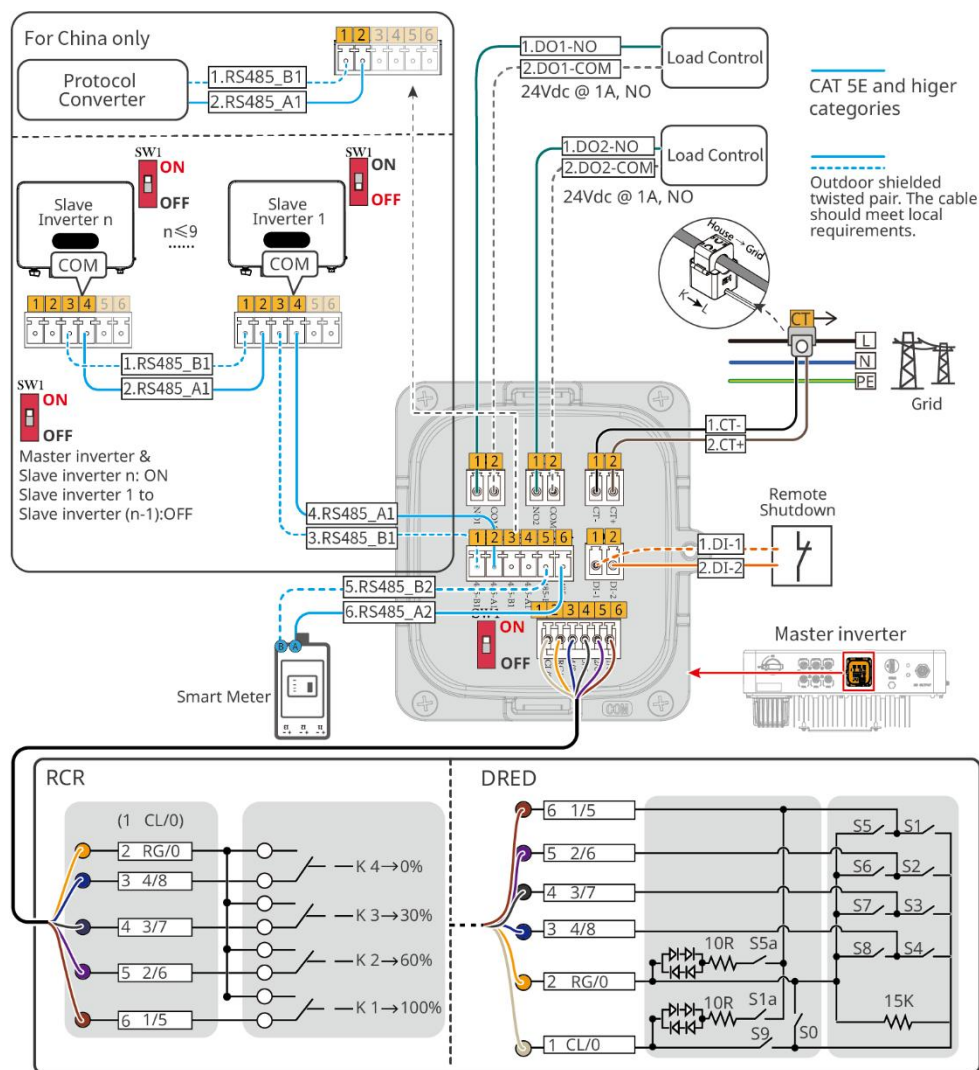


MS40ELC0006

Silkscreen	Function	Description
DO1 DO2	Load control (optional)	<ul style="list-style-type: none"> It supports connection with dry contact signals to achieve functions such as load control. The capacity of the DO contact is 24VDC@1A, and it is a NO (Normally Open) contact. It supports the connection of SG Ready heat pumps and controls the heat pumps through dry contact signals.
CT	CT connection port (CT)	It is used for single-inverter export output power limitation.
RS484	Parallel communication port or protocol converter communication port (RS485-1)	<ul style="list-style-type: none"> Used for communication between multiple inverters connected in parallel or connecting protocol converters (China only). The inverter connects to the protocol converter and uses the same set of RS485 ports for parallel scenario. If you need to connect to the protocol converter, you cannot use the parallel

		inverter function; in the parallel scenario, you cannot connect to the protocol converter.
Meter	Meter connection port (RS485-2)	The inverter is paired with a meter to achieve the function of export power limit. If you need supporting equipment, you can contact the inverter manufacturer for purchase.
DI	Remote shutdown or emergency power-off (India)	After the emergency switch sends a shutdown signal, the AC side of the inverter will automatically disconnect, and the grid-connection will stop. An external emergency shutdown switch is required.
DRM/RCR	DRED (Australia) or RCR (Europe) connection port	<ul style="list-style-type: none"> ● DRED (Demand Response Enabling Device): It provides a DRED signal control port to meet the DRED grid regulation requirements in Australia and New Zealand. The functions of DRM1-4 are reserved, and users need to prepare their own DRM devices. ● RCR (Ripple Control Receiver): It provides an RCR signal control port to meet the grid regulation requirements in regions such as Germany.
SW1	Terminal resistance DIP switch	<p>The inverter is equipped with an RS485 terminal resistor, and the DIP switch of this terminal resistor is turned on by default.</p> <p>"ON": On; "1": Off</p> <p>Operation method: Open the outer cover of the communication port and use an insulated pick to switch the terminal resistance DIP switch to "1" (OFF).</p>


NOTICE

- Make sure that the communication device is connected to the right terminal. Route the communication cable far away from any interference source or power cable to prevent the signal from being influenced.
- Connect the remote shutdown, CT, and dry contact communication cables using 2PIN communication terminals.
- Connect RS485 (meter), DRED/RCR communication cables using 6PIN communication terminals.
- If you need to use the DRED, RCR or remote shutdown function, turn it on in the SolarGo App after wiring.
- Do not turn on the function in the SolarGo App if the inverter is not connected to DRED, RCR or remote shutdown devices, or the inverter won't be able to connect to the grid.
- Get more detailed information about the smart dongle from the official website.
- The USB-RS485 adapter cable is only for Brazilian models. Contact after-sales service if you need to use it.
- Communication cable requirement: The RS485 communication cable should be an outdoor shielded twisted-pair cable meeting local standards.

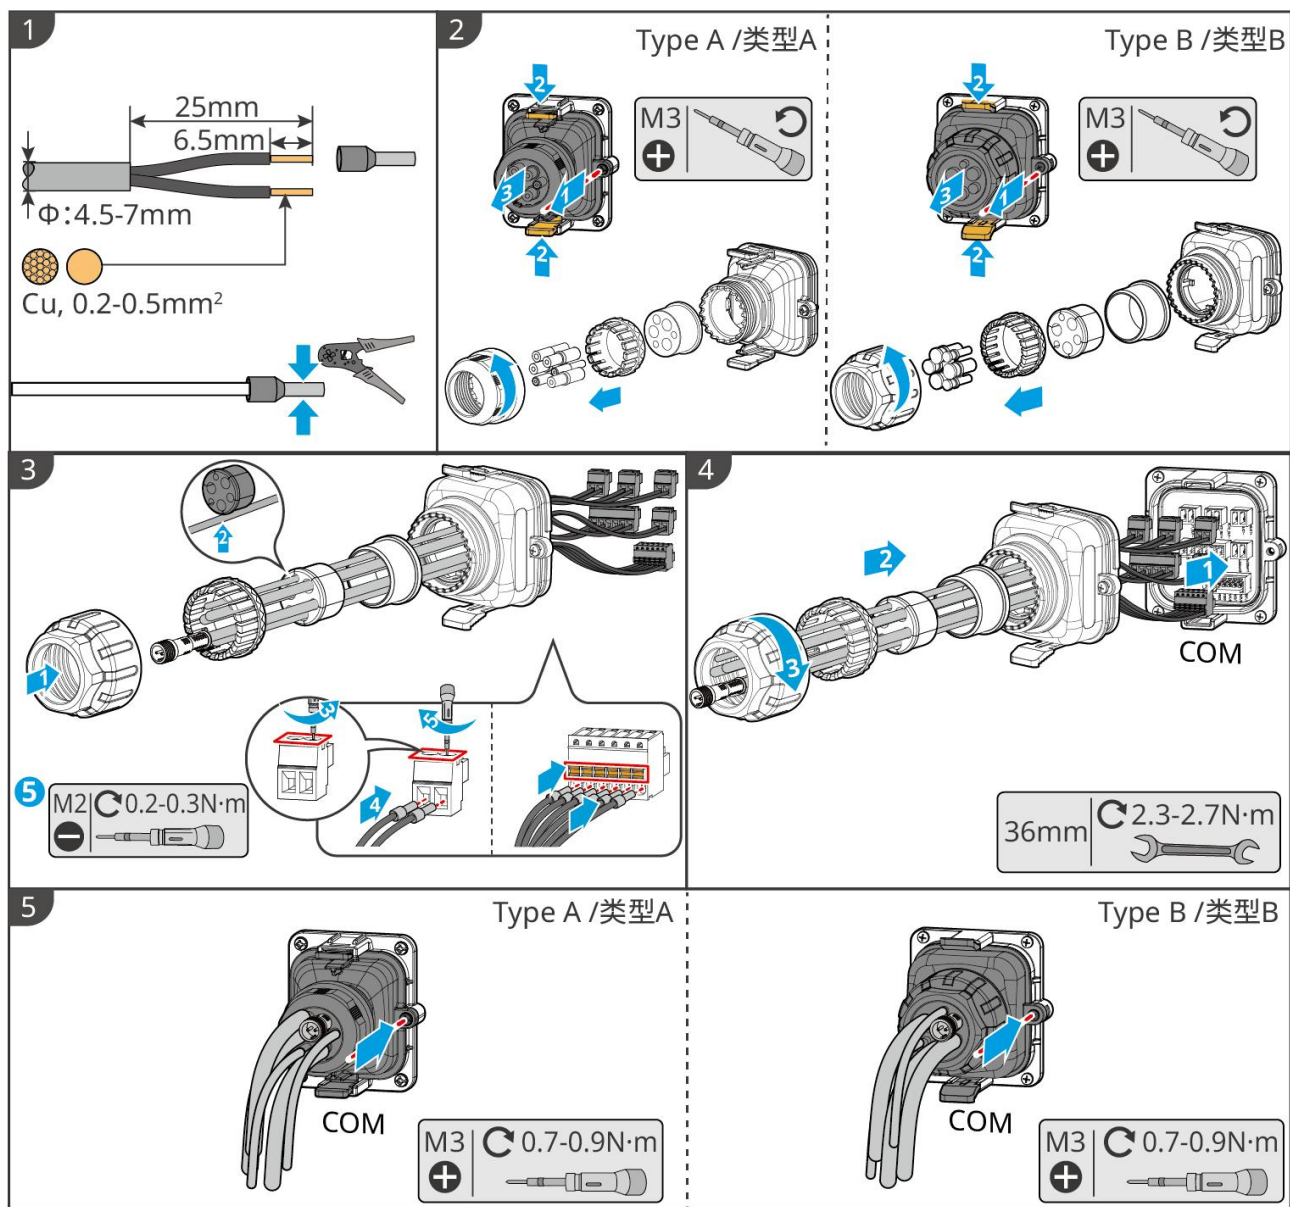

(For China only./仅中国)

MS40ELC0005

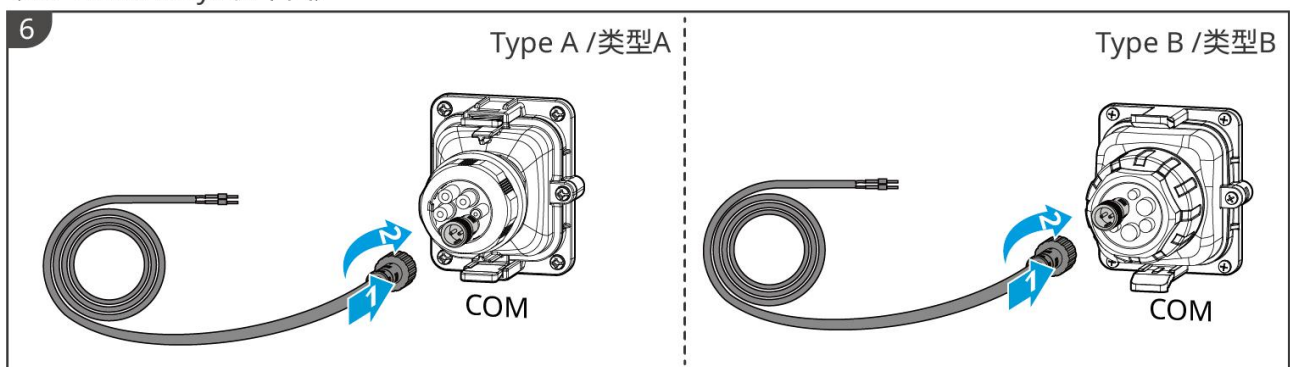

MS40ELC0007

7 Equipment Commissioning

7.1 Check Before Power ON


No.	Checking Item
1	The product is firmly installed at a clean place that is well-ventilated and easy-to operate.
2	The PE, DC input, AC output, and communication cables are connected correctly and securely.
3	Cable ties are intact, routed properly and evenly.
4	Unused ports and terminals are sealed.
5	The voltage and frequency at the connection point meet the inverter grid connection requirements.

7.2 Power On

Step 1 Turn on the AC switch between the inverter and the utility grid.

Step 2 Turn on the DC switch between the inverter and the PV modules.



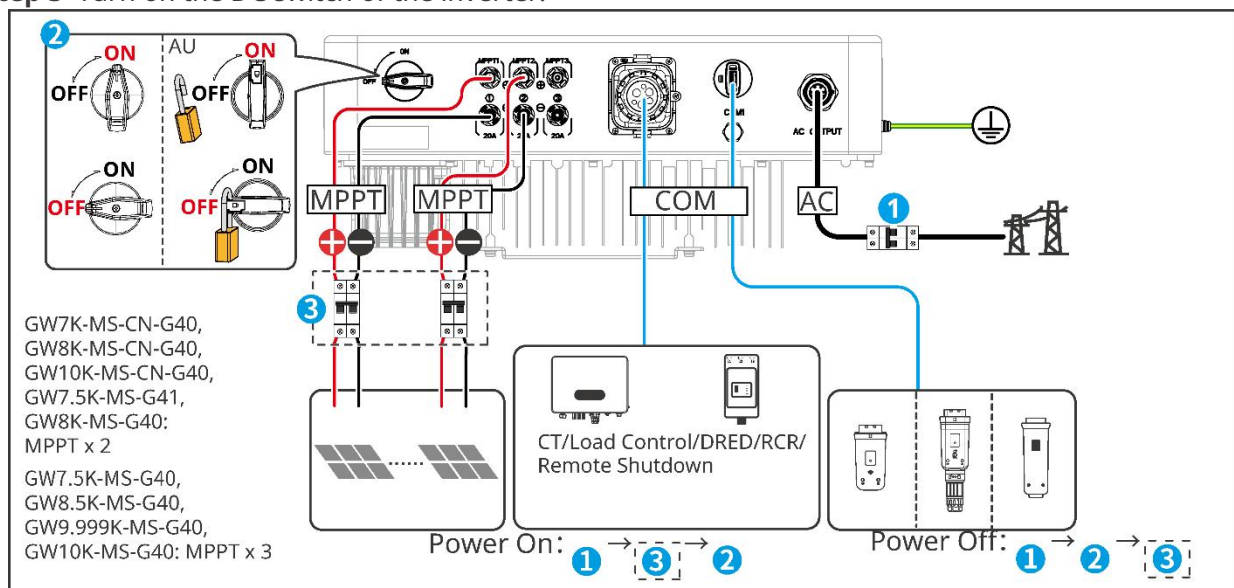















Step 3 Turn on the DC switch of the inverter.



MS40PWR0001

8 System Commissioning

8.1 Setting Inverter Parameters via App

Indicator	Status	Description
 Power		STEADY ON = EQUIPMENT POWER ON
		OFF = EQUIPMENT POWER OFF
 Operating		STEADY ON = THE INVERTER IS FEEDING POWER
		OFF = THE INVERTER IS NOT FEEDING POWER
		SINGLE SLOW BLINKING = SELF CHECK BEFORE CONNECTING TO THE GRID
		SINGLE FAST BLINKING = CONNECTING TO THE GRID
 Communications		STEADY ON= WIRELESS IS CONNECTED/ACTIVE
		SINGLE FAST BLINKING= WIRELESS SYSTEM IS RESETTNG
		BLINK 2 = WIRELESS IS NOT CONNECTED TO ROUTER OR BASE STATION
		BLINK 4 = NOT CONNECTED TO SERVER
		SINGLE SLOW BLINKING = RS485 IS CONNECTED
		OFF = WIRELESS IS RESTORING FACTORY DEFAULT SETTING
 Faulty		STEADY ON = A FAULT HAS OCCURRED
		OFF = NO FAULT

8.2 Setting Inverter Parameters via LCD

NOTICE



- Inverter firmware version shown in this document is V1.00.00. Communication version: V1.00. The screenshots are for reference only. The actual interface may differ.
- The name, range, and default value of the parameters are subject to change or adjustment. The actual display prevails.
- The power parameters should be set by professionals. It is to prevent the generating capacity from being influenced by wrong parameters.

LCD Button Description

- Stop pressing the button for a period on any page, the LCD will get dark and go back to the initial page.
- Short press the button to switch menu or adjust parameter values.
- Long press the button to enter the submenu. After adjusting the parameter values, long press to


set it.

Examples:

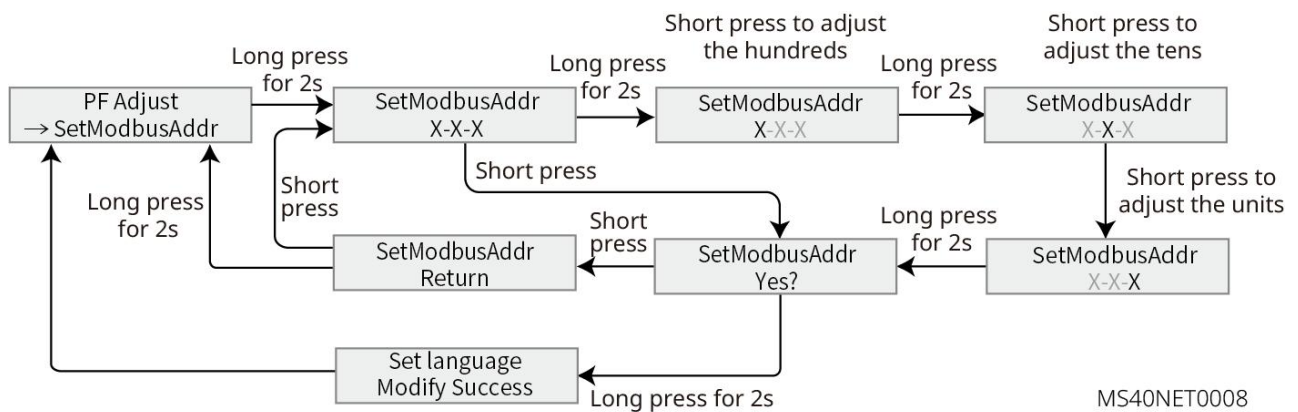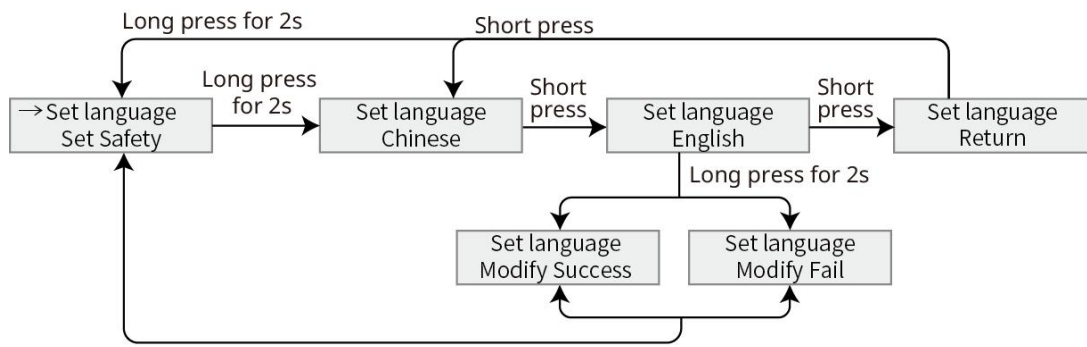

8.2.1 LCD Menu Introduction

This part describes the menu structure, allowing you to view inverter information and set parameters more conveniently.

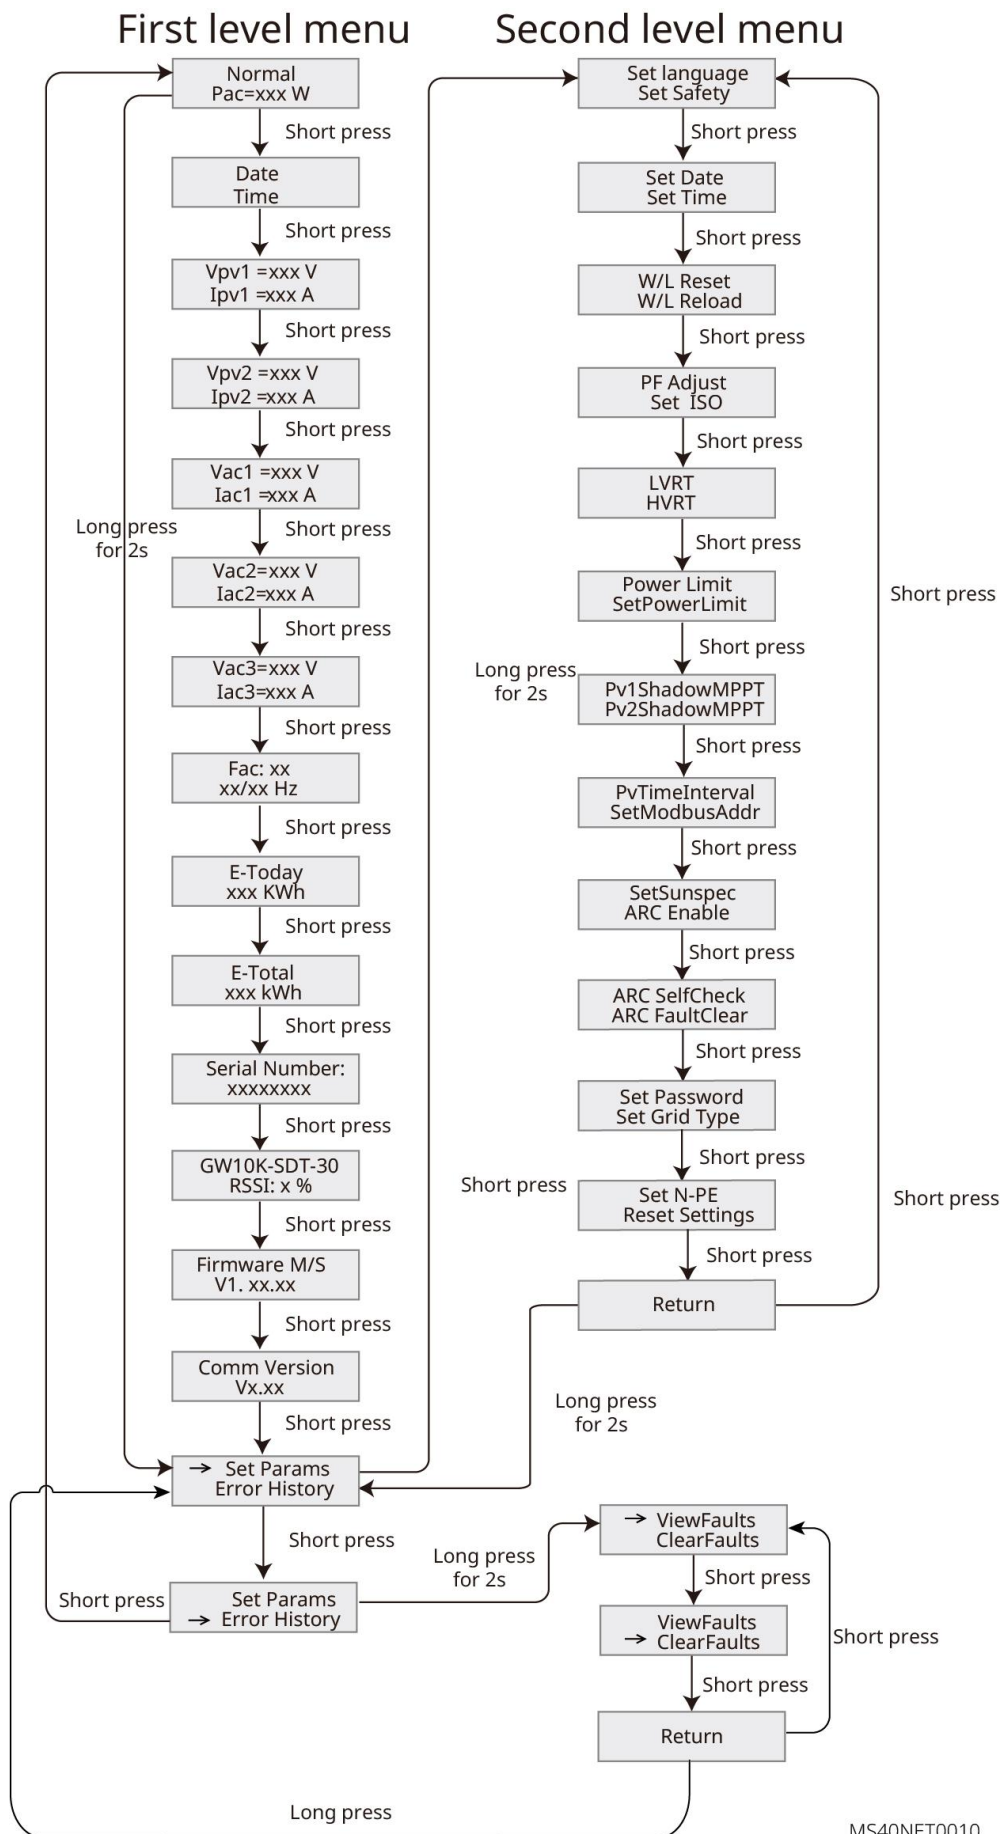

MS40NET0010

8.3 Setting Inverter Parameters via SolarGo App

1. SolarGo app is a mobile application that communicates with the inverter via Bluetooth module, WiFi module. Commonly used functions are as follows:
2. Check the operating data, software version, alarms, etc.
3. Set grid parameters, communication parameters, etc.
4. Equipment maintenance.

For more details, refer to the SolarGo APP User Manual.

Get the user manual from the official site or by scanning the QR code below.



SolarGo App



SolarGo App user manual

8.4 Monitoring via SEMS Portal

SEMS Portal is a monitoring platform that can communicate with devices via WiFi, LAN or 4G. Commonly used functions are as follows:

1. Management of organization or user information.
2. Addition and monitoring of power station information.
3. Equipment maintenance.



SEMS Portal App

9 Maintenance

9.1 Power Off the Inverter



- Power off the inverter before operations and maintenance. Otherwise, the inverter may be damaged or electric shocks may occur.
- Delayed discharge. Wait until the PV modules are discharged after power off.

Step 1 Issue a command to the inverter for halting the grid connection.

Step 2 Turn off the AC switch between the inverter and the utility grid.

Step 3 Turn off the DC switch of the inverter.

Step 4 (Optional) Turn off the switch between the inverter and the PV modules.

9.2 Removing the Inverter



- Make sure that the inverter is powered off.
- Wear proper PPE before any operations.

Step 1 Disconnect all the cables, including DC cables, AC cables, communication cables, the Communication Dongle, and PE cables.

Step 2 Handle or hoist the inverter to take it down from the wall or the bracket.

Step 3 Remove the bracket.

Step 4 Store the inverter properly. If the inverter needs to be used later, ensure that the storage conditions meet the requirements.

9.3 Disposing of the Inverter

If the inverter cannot work anymore, dispose of it according to the local disposal requirements for electrical equipment waste. The inverter cannot be disposed of together with household waste.

9.4 Troubleshooting

Perform troubleshooting according to the following methods. Contact the after-sales service if these methods do not work.

Collect the information below before contacting the after-sales service, so that the problems can be solved quickly.

1. Inverter information like serial number, software version, installation date, fault time, fault frequency, etc.
2. Installation environment, including weather conditions, whether the PV modules are sheltered or shadowed, etc. It is recommended to provide some photos and videos to assist in analyzing the problem.
3. Utility grid situation.

No.	Fault	Cause	Solutions
-----	-------	-------	-----------

1	Utility Loss	<ol style="list-style-type: none"> 1. Utility grid power fails. 2. The AC circuit or the AC breaker is disconnected. 	<ol style="list-style-type: none"> 1. The alarm is automatically cleared after the grid power supply is restored. 2. Check whether the AC cable is connected and the AC breaker is on.
2	Grid Overvoltage	The grid voltage exceeds the permissible range, or the duration of high voltage exceeds the requirement of HVRT.	<ol style="list-style-type: none"> 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid voltage is within the permissible range. <ul style="list-style-type: none"> ● Contact the local power company if the grid voltage exceeds the permissible range. ● Modify the overvoltage protection threshold, HVRT or disable the overvoltage protection function after obtaining the consent of the local power company if the grid frequency is within the permissible range. 3. Check whether the AC breaker and the output cables are connected securely and correctly if the problem persists.
3	Grid Rapid Overvoltage	The grid voltage is abnormal or ultra-high.	<ol style="list-style-type: none"> 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid voltage is within the permissible range. <ul style="list-style-type: none"> ● Contact the local power company if the grid voltage exceeds the permissible range. ● Modify the grid overvoltage rapid protection threshold after obtaining

			<p>the consent of the local power company if the grid voltage is within the permissible range.</p> <p>3. Check whether the AC breaker and the output cables are connected securely and correctly if the problem persists.</p>
4	Grid Undervoltage	The grid voltage is lower than the permissible range, or the duration of low voltage exceeds the requirement of LVRT.	<p>1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal.</p> <p>2. If the problem occurs frequently, check whether the grid voltage is within the permissible range.</p> <ul style="list-style-type: none"> ● Contact the local power company if the grid voltage exceeds the permissible range. ● Modify the undervoltage protection threshold, LVRT or disable the undervoltage protection function after obtaining the consent of the local power company if the grid frequency is within the permissible range. <p>Check whether the AC breaker and the output cables are connected securely and correctly if the problem persists.</p>
5	Grid 10min Overvoltage	The moving average of grid voltage in 10min exceeds the range of safety requirements.	<p>If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal.</p> <p>If the problem occurs frequently, check whether the grid voltage is within the permissible range.</p> <p>Contact the local power company if the grid voltage exceeds the permissible range.</p> <p>If the grid voltage is within the allowable</p>

			range, please modify the Grid 10min Overvoltage protection value with the consent of the local power operator.
6	Grid Overfrequency	Utility grid exception. The actual grid frequency exceeds the requirement of the local grid standard.	<p>If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal.</p> <p>If the problem occurs frequently, check whether the grid frequency is within the permissible range.</p> <p>If the grid voltage exceeds the allowed range, please contact local power operator.</p> <p>If the grid voltage is within the allowable range, please modify the Grid Overfrequency protection value with the consent of the local power operator.</p>
7	Grid Underfrequency	Utility grid exception. The actual grid frequency is lower than the requirement of the local grid standard.	<p>If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal.</p> <p>If the problem occurs frequently, check whether the grid frequency is within the permissible range.</p> <p>If the grid voltage exceeds the allowed range, please contact local power operator.</p> <p>If the grid voltage is within the allowable range, please modify the Grid Underfrequency protection value with the consent of the local power operator.</p>
8	Anti-islanding	<p>The utility grid is disconnected.</p> <p>The utility grid is disconnected according to the safety regulations, but the grid voltage is maintained due to the loads.</p>	The inverter will resume grid reconnection after the grid to return to normal.

9	LVRT Undervoltage		If occurs occasionally, it may be caused a short term grid abnormality.
10	HVRT Overvoltage	Utility grid exception. The duration of the utility grid exception exceeds the set time of LVRT.	The inverter will recover automatically after the grid is normal. If it occurs frequently, please check whether the grid voltage is within the allowed range. If no, please contact local power operator. If yes, please contact the local service center.
11	Abnormal GFCI 30mA	The input insulation impedance becomes low when the inverter is working.	If the problem occurs occasionally, it may be caused by a cable exception. The inverter will recover automatically after the problem is solved. Check whether the impedance between the PV string and PE is too low if the problem occurs frequently or persists.
12	Abnormal GFCI 60mA		
13	Abnormal GFCI 150mA		
14	Abnormal GFCI		
15	Large DC of AC current L1	The DC PV module of the output current exceeds the safety range or default range.	If the problem is caused by an external fault like a utility grid exception or frequency exception, the inverter will recover automatically after solving the problem. If the problem occurs frequently and the PV station cannot work properly, contact the dealer or the after-sales service.
16	Large DC of AC current L2		
17	Low Insulation Res.	<p>The PV string is short-circuited to PE.</p> <p>The installation environment of PV strings is relatively humid for a long time and the insulation of PE cable is poor.</p>	<p>Check the impedance of the PV string to the ground. If there is a short circuit phenomenon, please check the short circuit point and rectify it.</p> <p>Check whether the PE cable is connected correctly.</p> <p>If it is confirmed that the impedance is indeed lower than the default value in cloudy and rainy days, please reset the "insulation impedance protection value".</p>

18	Abnormal Ground	<p>The PE cable of the inverter is not connected well.</p> <p>The L cable and N cable are connected reversely when output of the PV string is grounded.</p>	<p>Check whether the PE cable of the inverter is connected properly.</p> <p>Check whether the L cable and N cable are connected reversely if output of the PV string is grounded.</p>
19	L-PE Short Circuit	The live wire connection of the inverter output terminal is abnormal	Check the wiring of the grid side. If the wiring is wrong, please correct it.
20	Anti Reverse power Failure	Abnormal fluctuation of load	<p>If the exception is caused by an external fault, the inverter will recover automatically after solving the problem.</p> <p>If the problem occurs frequently and the PV station cannot work properly, contact the dealer or the after-sales service.</p>
21	Internal Comm Loss	<p>Chip has not be powered on</p> <p>Chip program version error</p>	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
22	AC HCT Check abnormal	The sampling of the AC HCT is abnormal.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
23	GFCI HCT Check abnormal	The sampling of the GFCI HCT is abnormal.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
24	Relay Check abnormal	<p>The relay is abnormal or short-circuited.</p> <p>The control circuit is abnormal.</p> <p>The AC cable connection is abnormal, like a virtual connection or short circuit.</p>	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
25	Internal Fan abnormal	<p>The fan power supply is abnormal.</p> <p>Mechanical exception.</p> <p>The fan is aging and damaged.</p>	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.

26	Flash Fault	The internal Flash storage is abnormal.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
27	DC Arc Fault	The DC terminal is not firmly connected. The DC cable is broken.	Read the Quick Installation Guide and check whether the cables are connected properly.
28	AFCI Self-test Fault	AFCI detection is abnormal.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
29	Inv Module Overtemperature	The inverter is installed in a place with poor ventilation. The ambient temperature exceeds 60°C. A fault occurs in the internal fan of the inverter.	Check the ventilation and the ambient temperature at the installation point. If the ventilation is poor or the ambient temperature is too high, improve the ventilation and heat dissipation. Contact the dealer or after-sales service if both the ventilation and the ambient temperature are proper.
30	5V Ref abnormal	The reference circuit is abnormal.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
31	3V Ref abnormal		
32	BUS Overvoltage	The PV voltage is too high. The sampling of the inverter BUS voltage is abnormal.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
33	BUS Overvoltage(Slave CPU 1)	The isolation of the transformer of the inverter is poor, so two inverters influence each other when connected to the grid. One of the inverters reports DC Overvoltage.	
34	PV Input Overvoltage	The PV array configuration is not correct. Too many PV panels are connected in series in the PV	Check the serial connection of the PV array. Make sure that the open circuit voltage of the PV string is not higher than the

		string.	maximum operating voltage of the inverter.
35	PV Continuous Hardware Overcurrent	The PV configuration is not proper. The hardware is damaged.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
36	PV Continuous Software Overcurrent	The PV configuration is not proper. The hardware is damaged.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
37	PV String Reversed(String 1~String16)	The PV string is connected reversely.	Check whether PV strings are connected reversely.
38	PV voltage Low.	Sun light is weak or changing abnormally	If the problem occurs occasionally, the reason might be abnormal sun light. The inverter will recover automatically without manual intervention. If the problem occurs frequently, contact the dealer or the after-sales service.
39	BUS voltage Low.	Sun light is weak or changing abnormally	If the problem occurs occasionally, the reason might be abnormal sun light. The inverter will recover automatically without manual intervention. If the problem occurs frequently, contact the dealer or the after-sales service.
40	BUS Soft Start Failure	Boost driving circuit is abnormal.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
41	Gird Phase Lock failure	The grid frequency is unstable.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
42	Inverter Continuous	Short time sudden changes in the grid or load cause the control	If the problem occurs occasionally, ignore it. If the problem occurs frequently, contact the

	Overcurrent	overcurrent.	dealer or the after-sales service.
43	Inv Software Overcurrent		
44	R Phase Hardware Overcurrent		
45	PV Hardware Overcurrent	Sun light is weak or changing abnormally.	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
46	PV Software Overcurrent		
47	PV HCT Failure	Abnormal boost current sensor	Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists.
48	Cavity Overtemperature	<p>The inverter is installed in a place with poor ventilation.</p> <p>The ambient temperature exceeds 60°C.</p> <p>A fault occurs in the internal fan of the inverter.</p>	<p>Check the ventilation and the ambient temperature at the installation point.</p> <p>If the ventilation is poor or the ambient temperature is too high, improve the ventilation and heat dissipation.</p> <p>Contact the dealer or after-sales service if both the ventilation and the ambient temperature are proper.</p>
49	Incorrect PV Access Mode Setting	The actual PV access mode of the PV panels does not match the PV access mode set in the device.	<p>Check whether the PV access mode is set correctly. If it is incorrect, please reset the PV access mode in the correct way.</p> <p>Confirm whether each PV string actually connected is properly connected.</p> <p>If the PV strings are correctly connected, check through the App or the screen whether the currently set "PV access mode" corresponds to the actual access mode.</p> <p>If the currently set "PV access mode" does not match the actual access mode, you need to set the "PV access mode" to a mode consistent with the actual situation through the App or the screen. After the setting is</p>

			<p>completed, disconnect the AC output side switch and the DC input side switch, and then close the AC output side switch and the DC input side switch again after 5 minutes.</p> <p>After the setting is completed, if the current "PV access mode" is consistent with the actual access mode, but this fault is still reported, please contact the distributor or our company's customer service center.</p>
--	--	--	--

9.5 Routine Maintenance



DANGER

Power off the inverter before operations and maintenance. Otherwise, the inverter may be damaged or electric shocks may occur.

Maintaining Item	Maintaining Method	Maintaining Period
System Clean	Check the heat sink, air intake, and air outlet for foreign matter or dust.	Once 6-12 months
DC Switch	Turn the DC switch on and off ten consecutive times to make sure that it is working properly.	Once a year
Electrical Connection	Check whether the cables are securely connected. Check whether the cables are broken or whether there is any exposed copper core.	Once 6-12 months
Sealing	Check whether all the terminals and ports are properly sealed. Reseal the cable hole if it is not sealed or too big.	Once a year

9.6 Inverter Software Version Upgrade

To connect USB flash drive for local software upgrading.

Before upgrading the device using a USB flash drive, please contact the after-sales service center to obtain the software upgrade package and upgrade method.

10 Technical Parameters

Technical Data	GW7.5K-MS-G40	GW8.5K-MS-G40	GW9.999K-MS-G40
Input			
Max.Input Power (W) ^{*1}	15,000	17,000	19,998
Max.Input Voltage (V) ^{*2}	600		
MPPT Operating Voltage Range (V)	40~560	40~560	40~560
MPPT Voltage Range at Nominal Power (V)	160-500	185-500	210-500
Start-up Voltage (V)	50		
Nominal Input Voltage (V)	360		
Max. Input Current per MPPT (A)	20		
Max. Short Circuit Current per MPPT (A)	26		
Max. Backfeed Current to The Array (A)	0		
Number of MPPT	3		
Number of Strings per MPPT	1		
Output			
Nominal Output Power (W)	7,500	8,500	9,999
Nominal Output Apparent Power (VA)	7,500	8,500	9,999
Max. AC Active Power (W)	7,500	8,500	9,999
Max. AC Apparent Power (VA)	7,500	8,500	9,999
Nominal Power at 40℃ (W)(Only for Brazil)	7,500	8,500	/
Max Power at 40℃ (Including AC Overload)(W)(Only for Brazil)	7,500	8,500	/
Nominal Output Voltage (V)	220/230/240, L/N/PE		
Output Voltage Range (V)	160~270 (according to local standard)		

Nominal AC Grid Frequency (Hz)	50/60		
AC Grid Frequency Range (Hz)	45~55 / 55~65		
Max. Output Current (A)	34.1	38.7	45.5
Max. Output Fault Current (Peak and Duration) (A/us)	77/3	91/3	109/3
Inrush Current (Peak and Duration) (A/ms)	23/15	26/15	30/15
Nominal Output Current (A)	34.1@220V 32.6@230V 31.3@240	38.7@220V 37.0@230V 35.5@240V	45.5@220V 43.5@230V 41.7@240V
Power Factor	~1 (Adjustable from 0.8 leading to 0.8 lagging)		
Max. Total Harmonic Distortion	<3%		
Efficiency			
Max. Efficiency	97.8%	97.9%	97.9%
European Efficiency	97.2%	97.3%	97.3%
Protection			
PV String Current Monitoring	Integrated		
PV Insulation Resistance Detection	Integrated		
Residual Current Monitoring	Integrated		
DC Reverse Polarity Protection	Integrated		
Anti-islanding Protection	Integrated		
AC Overcurrent Protection	Integrated		
AC Short Circuit Protection	Integrated		
AC Overvoltage Protection	Integrated		
DC Switch	Integrated		
DC Surge Protection	Type II		
AC Surge Protection	Type II		
AFCI	Optional		

Emergency Power Off	Optional
Rapid Shutdown	Optional
Remote Shutdown	Optional
Power Supply at Night	Optional
General Data	
Operating Temperature Range (°C)	-25~+60
Relative Humidity	0~100%
Max. Operating Altitude (m)	4000
Cooling Method	Natural Convection
User Interface	LED, LCD, WLAN + APP
Communication	RS485, WIFI, LAN, Bluetooth, 4G
Communication Protocols	Modbus-RTU(SunSpec Compliant)
Weight (kg)	16
Dimension W×H×D (mm)	493*365*187
Noise Emission (dB)	< 30
Topology	Non-isolated
Self-consumption at Night (W)	<1
Ingress Protection Rating	IP66
Anti-corrosion Class	C4
DC Connector	MC4(4-6mm ²)
AC Connector	Plug and play connector (Max.16mm ²)
Environmental Category	4K4H
Pollution Degree	III
Overvoltage Category	DC II / AC III
Protective Class	I

The Decisive Voltage Class (DVC)	PV: C AC: C Com: A
Country of Manufacture(Only for Australia)	China

Technical Data	GW10K-MS-G40	GW7.5K-MS-G41	GW8K-MS-G40
Input			
Max.Input Power (W)*1	20,000	13,500	14,400
Max.Input Voltage (V) *2	600		
MPPT Operating Voltage Range (V)	40~560		
MPPT Voltage Range at Nominal Power (V)	210-500	220-500	240-500
Start-up Voltage (V)	50		
Nominal Input Voltage (V)	360		
Max. Input Current per MPPT (A)	20		
Max. Short Circuit Current per MPPT (A)	26		
Max.Backfeed Current to The Array (A)	0		
Number of MPPT	3	2	
Number of Strings per MPPT	1		
Output			
Nominal Output Power (W)	10,000	7,500	8,000
Nominal Output Apparent Power (VA)	10,000	7,500	8,000
Max. AC Active Power (W)	10,000	7,500	8,000
Max. AC Apparent Power (VA)	10,000	7500	8,000
Nominal Power at 40℃ (W)(Only for Brazil)	10,000	7500	8,000
Max Power at 40℃ (Including AC Overload)(W)(Only for Brazil)	10,000	7500	8,000
Nominal Output Voltage (V)	220/230/240, L/N/PE	220/230, L/N/PE	

Output Voltage Range (V)	160~270(according to local standard)		
Nominal AC Grid Frequency (Hz)	50/60		
AC Grid Frequency Range (Hz)	45~55 / 55~65		
Max. Output Current (A)	45.5	34.1	36.4
Max. Output Fault Current (Peak and Duration) (A/us)	109/3	77/3	77/3
Inrush Current (Peak and Duration) (A/ms)	30/15	23/15	23/15
Nominal Output Current (A)	45.5@220V 43.5@230V 41.7@240V	34.1@220V 32.6@230V	36.4@220V 34.8@230V
Power Factor	~1 (Adjustable from 0.8 leading to 0.8 lagging)		
Max. Total Harmonic Distortion	<3%		
Efficiency			
Max. Efficiency	97.9%	97.8%	97.8%
European Efficiency	97.3%	97%	97%
Protection			
PV String Current Monitoring	Integrated		
PV Insulation Resistance Detection	Integrated		
Residual Current Monitoring	Integrated		
DC Reverse Polarity Protection	Integrated		
Anti-islanding Protection	Integrated		
AC Overcurrent Protection	Integrated		
AC Short Circuit Protection	Integrated		
AC Overvoltage Protection	Integrated		
DC Switch	Integrated		
DC Surge Protection	Type II		
AC Surge Protection	Type II		

AFCI	Optional
Emergency Power Off	Optional
Rapid Shutdown	Optional
Remote Shutdown	Optional
Power Supply at Night	Optional
General Data	
Operating Temperature Range (°C)	-25~+60
Relative Humidity	0~100%
Max. Operating Altitude (m)	4000
Cooling Method	Natural Convection
User Interface	LED, LCD, WLAN + APP
Communication	RS485, WIFI, LAN, Bluetooth, 4G
Communication Protocols	Modbus-RTU (SunSpec Compliant)
Weight (kg)	16
Dimension W×H×D (mm)	493*365*187
Noise Emission (dB)	< 30
Topology	Non-isolated
Self-consumption at Night (W)	<1
Ingress Protection Rating	IP66
Anti-corrosion Class	C4
DC Connector	MC4(4-6mm ²)
AC Connector	Plug and play connector (Max.16mm ²)
Environmental Category	4K4H
Pollution Degree	III
Overvoltage Category	DC II / AC III

Protective Class	I
The Decisive Voltage Class (DVC)	PV: C AC: C Com: A
Country of Manufacture	China

*1: The actual value depends on the specific input power of PV panel

*2: When the input voltage ranges from 560 V to 600 V, the inverter will enter the standby state. When the input voltage returns to the MPPT operating voltage range of 40 V to 560 V, the inverter will resume normal operating state.

11 Explanation of Terms

Overvoltage Category Definition

Category I: Applies to equipment connected to a circuit where measures have been taken to reduce transient overvoltage to a low level.

Category II: Applies to equipment not permanently connected to the installation. Examples are appliances, portables tools and other plug-connected equipment.

Category III: Applies to a fixed equipment downstream, including the main distribution board. Examples are switch gear and other equipment in an industrial installation.

Category IV: Applies to equipment permanently connected at the origin of an installation (upstream of the main distribution board). Examples are electricity meters, primary over-current protection equipment and other equipment connected directly to outdoor open lines.

Definition of Types of Damp Places

Environmental Parameters	Level		
	3K3	4K2	4K4H
Temperature Range	0~+40°C	-33~+40°C	-33~+40°C
Humidity Range	5% to 85%	15% to 100%	4% to 100%

Definition of Environmental Category:

Outdoor Inverter: The ambient air temperature range is -25 to +60°C, and it is suitable for environments with pollution degree 3.

Indoor Type II Inverter: The ambient air temperature range is -25 to +40°C, and it is suitable for environments with pollution degree 3.

Indoor Type I Inverter: The ambient air temperature range is 0 to +40°C, and it is suitable for environments with pollution degree 2.

Definition of Pollution Degree Categories:

Pollution Degree 1: No pollution or only dry non-conductive pollution.

Pollution Degree 2: In general, there is only non-conductive pollution, but the transient conductive pollution caused by occasional condensation must be taken into account.

Pollution Degree 3: There is conductive pollution, or the non-conductive pollution becomes conductive pollution due to condensation.

Pollution Degree 4: Persistent conductive pollution, such as pollution caused by conductive dust or rain and snow.

12 Obtaining of Relevant Product Manuals


Name of the Document	Official Website Link
Quick Installation Guide for EzLink3000	https://en.goodwe.com/Ftp/EN/Downloads/User%20Manual/GW_EzLink_Quick%20Installation%20Guide-EN.pdf
Quick Installation Guide for 4G Kit - CN - G20 & 4G Kit - CN - G21	https://www.goodwe.com/Ftp/Installation-instructions/4G-KIT.pdf
WiFi/LAN Kit-20 & WiFi Kit-20 Quick Installation Guide	https://en.goodwe.com/Ftp/EN/Downloads/User%20Manual/GW_WiFi-LAN-Kit-20_WiFi-Kit-20_Quick-Installation-Guide-POLY.pdf
GMK110 to GMK110D Quick Installation Guide	https://en.goodwe.com/Ftp/EN/Downloads/User%20Manual/GW_GM1000%20&%20GM3000%20&%20GM1000D_Quick%20Installation%20Guide-POLY.pdf
GM1000& GM3000& Quick Installation Guide for GM1000	https://en.goodwe.com/Ftp/EN/Downloads/User%20Manual/GW_GM1000%20&%20GM3000%20&%20GM1000D_Quick%20Installation%20Guide-POLY.pdf
GMK330, GMK360, GM330 Quick Installation Guide	https://en.goodwe.com/Ftp/EN/Downloads/User%20Manual/GW_Smart%20Meter-EU_Quick%20Installation%20Guide-POLY.pdf




Official Website

GoodWe Technologies Co., Ltd.

 No. 90 Zijin Rd., New District, Suzhou, 215011, China

 www.goodwe.com

 service@goodwe.com



Local Contacts